

[bookboon.com](http://bookboon.com)

# Electrically Driven Membrane Processes

Søren Prip Beier



Download free books at

[bookboon.com](http://bookboon.com)

# Contents

	<b>Nomenclature</b>	<b>3</b>
<b>1.</b>	<b>Introduction</b>	<b>6</b>
<b>2.</b>	<b>Electrodialysis</b>	<b>16</b>
2.1	Basic concept	17
2.2	Critical current and critical current density	19
2.2.1	Experimental determination of critical current	29
2.2.2	Determination of critical current from literature correlations	30
2.2.3	Influence of hydrodynamic conditions on the critical current	35
2.3	Desalination degree	38
2.4	Current efficiency	40
2.5	Energy requirement	43
2.5.1	Pump energy	43
2.5.2	Electrical energy	44
2.5.3	Thermodynamic least amount of energy	46
2.6	Anti-Fouling Mechanism	49
<b>3.</b>	<b>Summary</b>	<b>51</b>
Example A:	Transport numbers	14
Example B:	Experimental determination of critical current	29
Example C:	Determination of critical current from literature correlations	32
Example D:	Influence of hydrodynamic conditions on the critical current	36
Example E:	Desalination degree	39
Example F:	Current efficiency	42
Example G:	Thermodynamic efficiency	47

Please click the advert

www.job.oticon.dk

**oticon**  
PEOPLE FIRST

Download free ebooks at [bookboon.com](http://bookboon.com)

# Electrically Driven Membrane Processes

This text is written to all chemical engineering students who are participating in courses about membrane processes and membrane technology. Membrane processes find applications in almost all kinds of industries as one or more down stream purification/separation processes:

- Chemical industries
- Pharmaceutical industries
- Food industries
- Dairy industries
- Wastewater treatment
- Etc...

Because of the wide spectrum of applications, knowledge about membrane processes is of great importance and each engineering student who chooses membranes as the main path of interests has a world of opportunities in coming career.

For reading and understanding this text you are supposed to have the basic skills in mathematics and chemistry in general. Thus this text is for students who have completed the basic engineering introduction courses or for industry staff who wants to get a quick introduction to this field. This text gives an introduction to principles behind electrically driven membrane processes in general and electrodialysis in particular. Relevant theory will be presented together with terms widely used in the world of membrane technology.

After the presentation of certain equations the SI-units will be given in order to give the reader an easy overview of the different terms and parameters in that particular equation and why these terms are included in the equation. Relevant examples will be included in order to show how the described theory can be applied in practice.

I alone am responsible for any misprints or errors and I will be grateful to receive any critics and suggestions for improvement.

November 2006

Søren Prip Beier

# Nomenclature

$a$	Activity
$A$	Anion exchange membrane
$A_{\text{membrane}}$	Area of membrane
$BC$	Boundary condition
$C$	Cation exchange membrane
$c$	Concentration
$C_1, C_2, C_3$	Constants
$c_c$	Concentrate bulk concentration
$c'_c$	Concentrate concentration at membrane surface
$c_d$	Diluate bulk concentration
$c'_d$	Diluate concentration at membrane surface
$D$	Diffusion coefficient
$d_h$	Hydraulic diameter
$E$	Voltage
$E_{\text{don}}$	Donnan potential
$\dot{E}$	Energy consumption
$eq.$	Equivalent
$F$	Faraday number (96485 C/eq.)
$i$	Current density
$I$	Current
$J$	Flux
$k$	Mass transfer coefficient
$L$	Length of flow channel
$m$	Mobility
$n$	Number of cell pairs
$Q$	Volume flow rate
$Q_c$	Concentrate volume flow rate
$Q_d$	Diluate volume flow rate
$Q_e$	Electrode solution volume flow rate
$R$	Electrical resistance
$Re$	Reynolds number
$R_{\text{gas}}$	Gas constant
$S$	Desalination degree
$Sc$	Schmidt number
$Sh$	Sherwood number

$t_+$	Transport number of cation in solution
$t_-$	Transport number of anion in solution
$\bar{t}_+$	Transport number of cation in membrane
$\bar{t}_-$	Transport number of anion in membrane
$T$	Absolute temperature
$u$	Flow velocity
$x$	Direction
$z$	Valence of ion
$z_+$	Valence of cation
$z_-$	Valence of anion

**Greek letters**

$\delta$	Boundary layer thickness
$\Delta p$	Pressure drop
$\eta$	Current efficiency
$\eta_x, \quad x = c, d, e, pump$	Pump efficiency
$\mu$	Chemical potential
$\nu$	Kinematic viscosity
$\sigma$	Electrical conductance
$\psi$	Electrical potential
$\xi$	Current utilization

Please click the advert

01001001 01010100  
 00100000 01010100  
 01110010 01100001  
 01101001 01101110  
 01100101 01100101

Sie sehen hier mehr als Nullen und Einsen?

Wir sehen Ihre Karriere im IT-Trainee-programm. Als spätere Fach- oder Führungskraft.


[www.perspektiven.allianz.de](http://www.perspektiven.allianz.de)

Allianz Karriere

Allianz 

# 1. Introduction

A membrane process is capable of performing a certain separation by use of a membrane. The core in every membrane process is thus the membrane that allows certain components to pass through and retain other components. Initially some of the most important terms used in membrane technology are shown in Figure 1.

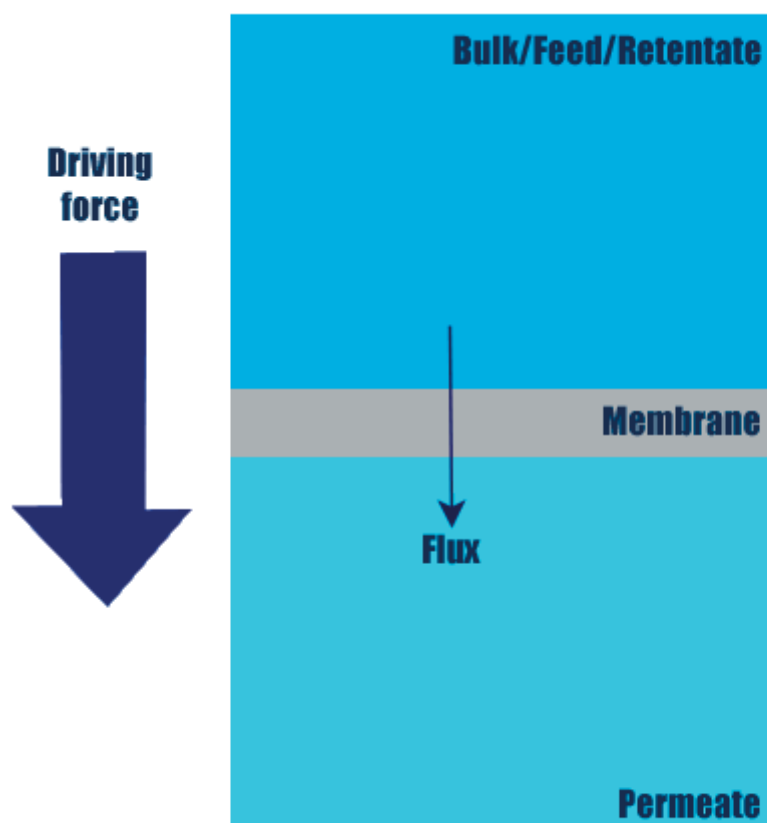

**Figure 1: Membrane process**

Sketch of a membrane process. The core is the membrane it self through which a driving force induces a flux from the bulk to the permeate side.

The feed side is often referred to as the *bulk solution*. The components in the bulk solution that are retained can also be referred to at the *retentate*. When a driving force is established across the membrane a *flux* will go through the membrane from the bulk solution to the permeate side. The flux is referred to with the letter “ $J$ ”. On the other side of the membrane the *permeate* is located.

A particular separation is accomplished by use of a membrane with the ability of transporting one component more readily than another. In other words, the membrane is more permeable to certain



components than other components because of differences in physical or chemical properties between the membrane and the components that are transported through the membrane. As seen in Figure 1, a driving force across the membrane induces a flux from the bulk solution to the permeate side. Different driving forces are used in different membrane processes (listed in Table 1).

**Table 1: Different membrane processes**

*Different driving forces, different membrane processes.*

Driving force	Membrane process
Pressure difference	Micro-, ultra-, nanofiltration and reverse osmosis
Concentration difference	Gas separation, pervaporation, dialysis
Temperature difference	Membrane distillation, thermo osmosis
Electrical voltage difference	Electrodialysis, membrane electrolysis

In this text we will focus on membrane processes in which the driving force consists of an electrical voltage difference. Electrically driven membrane processes are widely used to remove charged components from a given feed solution or suspension. Thus the applied driving force is a voltage difference and the components that are removed are ions. In contrast to pressure driven membrane processes where you have a volume flux through the membrane, you have a flux of ions through the membrane in electrically driven membrane processes. In order to establish an electrical driving force you need an electrical field. Therefore two electrodes are required; a cathode and an anode. The positive ions (cations) in a solution will migrate to the negative electrode (cathode), the negative ions (anions) will migrate to the positive electrode (anode) and the uncharged molecules will not be affected by the electrical field. One of the greatest applications of electrically driven membrane processes is the desalination of saline water in the production of potable water. The membranes used for this purpose are ion exchange membranes which only allow transport of certain ions.

- *Cation exchange membranes:* Cation exchange membranes are incorporated with negatively charged groups (for example sulfonic or carboxylic acid groups) which will repel anions and only allow transport of cations.
- *Anion exchange membranes:* Anion exchange membranes are incorporated with positively charged groups (for example those derived from quaternary ammonium salts) which will repel cations and only allow transport of anions.

Various types of ion exchange membranes can be distinguished. You can either have heterogeneous or homogeneous ion exchange membranes:

- *Heterogeneous ion exchange membranes:* Heterogeneous ion exchange membranes are prepared from ion exchange resins and a film-forming polymer. These materials are combined and made into a film by dry-molding for example. The mechanical strength is relatively poor especially at high swelling degrees and the electrical resistance is relatively high which of course is unwanted.

- *Homogeneous ion exchange membranes:* In homogeneous ion exchange membranes the charged groups are attached directly to the polymer chains. The charge is thus distributed uniformly within the whole membrane structure. The swelling of these membranes can be reduced by crosslinking the polymers.

In order to have a good ion exchange membrane, the membrane has to fulfill certain criteria:

- High selectivity
- High electrical conductivity
- High mechanical strength
- High chemical strength
- High ion permeability
- Low electrical resistance

The separation principle when ion exchange membranes are used is based on Donnan exclusion which is sketched in Figure 2. The figure shows the case with anions being excluded by cations at the surface of a cation exchange membrane.

Please click the advert

## Turning a challenge into a learning curve. Just another day at the office for a high performer.

### Accenture Boot Camp – your toughest test yet

Choose Accenture for a career where the variety of opportunities and challenges allows you to make a difference every day. A place where you can develop your potential and grow professionally, working alongside talented colleagues. The only place where you can learn from our unrivalled experience, while helping our global clients achieve high performance. If this is your idea of a typical working day, then Accenture is the place to be.

It all starts at Boot Camp. It's 48 hours that will stimulate your mind and enhance your career prospects. You'll spend time with other students, top Accenture Consultants and special guests. An inspirational two days

packed with intellectual challenges and activities designed to let you discover what it really means to be a high performer in business. We can't tell you everything about Boot Camp, but expect a fast-paced, exhilarating

and intense learning experience. It could be your toughest test yet, which is exactly what will make it your biggest opportunity.


Find out more and apply online.

Visit [accenture.com/bootcamp](https://www.accenture.com/bootcamp)

• Consulting • Technology • Outsourcing

  
High performance. Delivered.



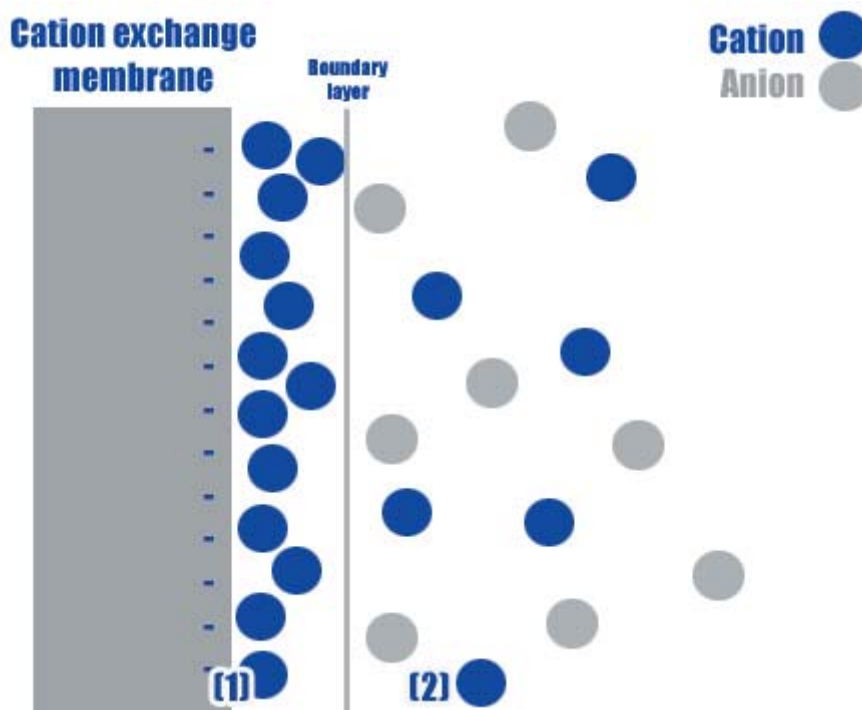

**Figure 2: Donnan exclusion at membrane surface**

The separation principle associated with ion exchange membranes is based on Donnan exclusion. The cation exchange membrane is incorporated with negative charges and thus a “layer” of oppositely charged cations occupy the region close the membrane surface which is the boundary layer (1). Outside the boundary layer the concentration of cations and anions is equal (2).


Donnan exclusion is named after the British chemist Frederick George Donnan, and as sketched in Figure 2 ions which the same charge as the membrane are excluded because a layer of oppositely charged ions are located closest to the membrane surface in the boundary layer. The chemical potential of the cations in the membrane (phase 1, Figure 2) and outside the boundary layer (phase 2, Figure 2) can be expressed as follows:

$$\begin{aligned} \mu_+^1 &= (\mu_+^1)^0 + R_{gas} \cdot T \cdot \ln(a_+^1) + z_+ \cdot F \cdot \Psi^1, \text{ chemical potential in the membrane} \\ \mu_+^2 &= (\mu_+^2)^0 + R_{gas} \cdot T \cdot \ln(a_+^2) + z_+ \cdot F \cdot \Psi^2, \text{ chemical potential in the bulk} \end{aligned} \quad (1)$$

At equilibrium the chemical potential in the membrane and in the bulk solution must equal according to thermodynamic considerations. The Donnan potential  $E_{don}$  is defined at the difference between the potential in the membrane  $\psi^1$  and in the bulk solution  $\psi^2$ . If the chemical potential at reference state is assumed to be equal the following expression for the Donnan potential can be derived from equation (1):

$$E_{don} = \psi^1 - \psi^2 = -\frac{R_{gas} \cdot T}{z_+ \cdot F} \cdot \ln\left(\frac{a_+^1}{a_+^2}\right) \quad (2)$$

The Donnan potential here is defined from the activities of the cations. A similar expression can be written for the anions. It is seen from equation ( 2 ) that the Donnan potential is proportional to the natural logarithmic ratio between the activity of the ions in the membrane (phase 1) and the activity of the ions in the bulk solution (phase 2). Thus it is the much higher concentration of one of the ions inside the membrane that induces the Donnan potential. The Donnan potential results in the potential build-up in the boundary layer (Figure 2) which gives a certain distribution of ions in the membrane, boundary layer and in the bulk and it is this distribution that determines the transport of ions. The Donnan exclusion can also be depicted in another way that might explain the situation better. In Figure 3 a cross sectional cut of a cation exchange membrane is sketched. You can see a pore through the membrane and the walls are incorporated with negatively charges just as the membrane surface sketched in Figure 2.

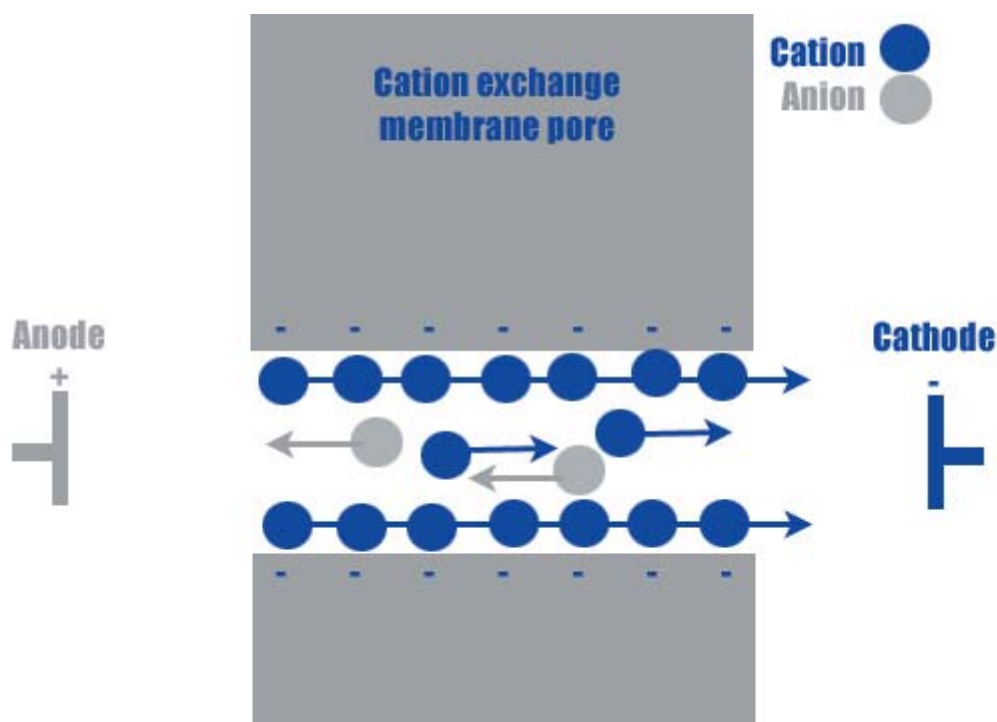

**Figure 3: Donnan exclusion inside membrane pore**

*The “walls” of a cation exchange membrane pore are covered with negative charges. Thus cations will cover the walls because of electrostatic interactions. In the rest of the pore volume both cations and anions can in principle be found. When a voltage difference is applied the anions will migrate towards the anode and the cation toward the cathode.*

In Figure 3 it is seen that because of the negatively charges incorporated in the cation exchange membrane there are many more cations present inside the membrane than anions. When an electrical voltage then is applied over the membrane the cations will migrate towards the cathode and the anions towards the anode. Because there are many more cations present inside the membrane than anions, many more cations will be transported through the membrane than anions. The same is the case in anion exchange membranes where many more anions are transported through because many more anions are present inside anion exchange membranes. This is the principle behind the separation of differently charged ions in ion exchange membranes. Some anions are able to pass through a cation exchange membrane but compared to the number of cations that pass through the cation exchange membrane this

amount of transported anions is very low. Ions are transported through ion exchange membranes as sketched in Figure 3 but also water molecules can convectively be dragged in the same direction as the ions. This is called electroosmotic water transport. In the situation sketched in Figure 3 we will thus have an electroosmotic transport of water molecules toward the cathode (water molecules are convectively dragged along with cations) that is very much larger than the small electroosmotic water transport towards the anode (water molecules are convectively dragged along with the anions). Thus the overall electroosmotic water transport will be in the direction of the cathode in the situation sketched in Figure 3 with the cation exchange membrane. In anion exchange membranes the overall electroosmotic water transport will of course be in the direction of the anode.

If the concentration of negatively incorporated charges in the cation exchange membrane is known (or concentration of positively incorporated charges in the anion exchange membrane) the concentration of co-ions inside the membrane can be calculated. We are looking at the case with a cation exchange membrane as sketched in Figure 2 and Figure 3. When the so-called Donnan equilibrium is established there is a connection between the concentrations of negative charges in the bulk solution, in the membrane pores and the negative charges incorporated into the membrane. If we are looking at an example with sodium chloride in solution in equilibrium with sodium chloride in a cation exchange membrane an expression for the Donnan equilibrium can be derived since there has to be electrical neutrality overall:

$$\frac{c_{Cl^-}}{c_{Cl^-}} = \sqrt{\frac{c_{R^-}}{c_{Cl^-}}} + 1 \quad (3)$$

Please click the advert



**Join the Vestas Graduate Programme**

Experience the Forces of Wind and kick-start your career

As one of the world leaders in wind power solutions with wind turbine installations in over 65 countries and more than 20,000 employees globally, Vestas looks to accelerate innovation through the development of our employees' skills and talents. Our goal is to reduce CO<sub>2</sub> emissions dramatically and ensure a sustainable world for future generations.

Read more about the Vestas Graduate Programme on [vestas.com/jobs](http://vestas.com/jobs).  
**Application period will open March 1 2012.**

**Wind.** It means the world to us.™

Download free ebooks at [bookboon.com](http://bookboon.com)

Here the concentration of chloride in the bulk solution is denoted  $c_{Cl^-}$  and the concentration of chloride in the cation exchange membrane is denoted  $\bar{c}_{Cl^-}$ . The concentration of fixed negative charges inside the cation exchange membrane is denoted  $\bar{c}_R^-$ . This expression can be used to determine the concentration of anions inside a cation exchange membrane. This can be useful in the calculation of so-called *transport numbers* which we will see later.

Since we are dealing with an electrical field and the flow of current we first have to introduce the difference between two important terms:

$$\begin{aligned} - \quad I, \text{ Current (flow of charges)} & \quad SI - \text{units} : I = \left[ I = \frac{C}{s} \right] \\ - \quad i, \text{ Current density (flux of charges)} & \quad SI - \text{units} : i = \left[ i = \frac{C}{m^2 \cdot s} \right] \end{aligned}$$

As one can see the current is the total flow of charges in a given cross sectional area (wire, membrane area etc.) and can be obtained by multiplying the current density with the cross sectional area of the flow of charges. We denote the current with a capital “I” and the current density with a small “i”.

If we are looking at cations, the transport through a bulk solution and through a cation exchange membrane can be written based on a phenomenological equation:

$$\left. \begin{aligned} J &= t_+ \cdot \frac{i}{z_+ \cdot F} \quad (\text{flux in bulk solution}) \\ J &= \bar{t}_+ \cdot \frac{i}{z_+ \cdot F} \quad (\text{flux in membrane}) \end{aligned} \right\} SI - \text{units} : J = \left[ \frac{\left( \frac{C}{s \cdot m^2} \right)}{\frac{eq.}{mole} \cdot \frac{C}{eq.}} = \frac{mole}{s \cdot m^2} \right] \quad (4)$$

As seen from the SI-units in equation (4) we are dealing with a flux of charges (coulombs pr. time pr. area). The flux is proportional to the current density  $i$  and  $z_+$  is the valence of the cations (eq. pr. mole) and  $F$  is the Faraday constant (96485 C/eq.). As mentioned earlier, the flux is a flux of charges pr. time pr. area (moles of charges). This is in contrast to pressure driven membrane processes where we have a volume flux (volume pr. time pr. area). The proportionally constants in equation (4) are *transport numbers*.

$$\begin{aligned} t_+ & \quad (\text{transport number of cations in solution}) \\ \bar{t}_+ & \quad (\text{transport number of cations in membrane}) \end{aligned} \quad (5)$$

Transport numbers can be defined for specific ions in specific phases based on their concentrations and mobility in that respective phase. Here the transport numbers of cations are defined in solutions and in the membrane phase:

$$t_+ = \frac{m_+ \cdot c_+}{m_+ \cdot c_+ + m_- \cdot c_-}, \quad \text{transport number of cations in solution} \quad (6)$$

$$\bar{t}_+ = \frac{\bar{m}_+ \cdot \bar{c}_+}{\bar{m}_+ \cdot \bar{c}_+ + \bar{m}_- \cdot \bar{c}_-}, \quad \text{transport number of cations in membrane}$$

Here  $m$  is the mobility of the ions. The mobility of cations and anions respectively is almost the same in the membrane and in the solutions which is also visualized in Figure 3 where anions and cations are equally mobile. Thus it is the concentrations that roughly determine the size of the transport number. Sodium chloride (NaCl) can be used as an example. In a solution sodium ions and chloride ions are transported almost equally since they are equal in concentration and in mobility. Thus  $t_+$  and  $t_-$  are almost the same according to equation (6), but in a cation exchange membrane almost only sodium ions are present (see again Figure 3). Thus the cation concentration in the membrane is much larger than the anion concentration which according to equation (6) gives a transport number of almost 1. The sum of transport numbers of the cations and anions in solutions and in membrane respectively equals 1 (can be derived from equation (6)), and thus the following can be stated for solutions containing sodium chloride:

$$t_+ + t_- = 1 \Rightarrow t_+ \approx t_- \approx 1/2 \quad (\text{transport numbers in solutions})$$

$$\bar{t}_+ + \bar{t}_- = 1 \Rightarrow \bar{t}_+ \approx 1 \quad (\bar{t}_+ \gg \bar{t}_-, \text{ transport numbers in cation exchange membrane}) \quad (7)$$

$$\bar{t}_+ + \bar{t}_- = 1 \Rightarrow \bar{t}_- \approx 1 \quad (\bar{t}_- \gg \bar{t}_+, \text{ transport numbers in anion exchange membrane})$$

Please click the advert



it's an interesting world

## Get under the skin of it.

### Graduate opportunities Cheltenham | £24,945 + benefits

One of the UK's intelligence services, GCHQ's role is two-fold: to gather and analyse intelligence which helps shape Britain's response to global events, and, to provide technical advice for the protection of Government communication and information systems. In doing so, our specialists – in IT, internet, engineering, languages, information assurance, mathematics and intelligence – get well beneath the surface of global affairs. If you thought the world was an interesting place, you really ought to explore our world of work.

[www.careersinbritishintelligence.co.uk](http://www.careersinbritishintelligence.co.uk)

Applicants must be British citizens. GCHQ values diversity and welcomes applicants from all sections of the community. We want our workforce to reflect the diversity of our work.





Thus in a solution both sodium and chloride ions have transport numbers of  $\sim 1/2$ . In cation exchange membranes the transport number of anions almost equals zero and thus the transport number of cations in a cation exchange membrane almost equal 1. In anion exchange membrane on the other hand the transport number of cations almost equals zero leading to a transport number of anions close to 1. As seen in equation ( 5 ), ( 6 ) and ( 7 ) a “bar” is placed on top of the “ $t$ ” in order to show that the corresponding transport number refers to the transport number in the membrane.

We have now seen in equation ( 7 ) that for sodium chloride the transport numbers almost equal  $1/2$  and 1 in solution and in the membrane respectively. This is also true when we are dealing with dilute solutions when the concentration of co-ions inside the membrane is very low. Of course this co-ion concentration will increase if the bulk concentration increases and thus according to equation ( 6 ) the co-ion concentration can no longer be neglected when the transport numbers inside the membrane is to be calculated. We will look more at that in the following example:

### Example A: Transport numbers

The transport number of sodium ions inside a cation exchange membrane is to be calculated when the membrane is in equilibrium with a solution of 0.1 M and 1.0 M respectively. The producer of the membrane informs that the fixed negative charge concentration inside the cation exchange membrane is  $\bar{c}_{R^-} = 1.54 \text{ M}$ . The transport number of cations inside the cation exchange membrane can be calculated according to equation ( 6 ) on page 13. We assume that the mobility of cations and anions respectively are equal:

$$\bar{t}_+ = \frac{\bar{m}_{Na^+} \cdot \bar{c}_{Na^+}}{\bar{m}_{Na^+} \cdot \bar{c}_{Na^+} + \bar{m}_{Cl^-} \cdot \bar{c}_{Cl^-}} = \frac{1}{1 + \frac{\bar{c}_{Cl^-}}{\bar{c}_{Na^+}}}$$

The concentration of sodium ions inside the membrane must equal the sum of chloride ions and fixed negative charges because of electrical neutrality. This means the transport number can be calculated as follows:

$$\bar{t}_+ = \frac{1}{1 + \frac{\bar{c}_{Cl^-}}{\bar{c}_{Na^+}}} = \frac{1}{1 + \frac{\bar{c}_{Cl^-}}{\bar{c}_{Cl^-} + \bar{c}_{R^-}}}$$

The concentration of chloride inside the membrane can be calculated from the Donnan equilibrium expression given in equation ( 3 ) on page 11. For the two bulk concentrations of 0.1 M and 1.0 M this give the following chloride concentrations inside the membrane:

$$c_{NaCl} = 0.1 \text{ M: } \frac{c_{Cl^-}}{\bar{c}_{Cl^-}} = \sqrt{\frac{\bar{c}_{R^-}}{c_{Cl^-}} + 1} \Leftrightarrow \frac{0.1 \text{ M}}{\bar{c}_{Cl^-}} = \sqrt{\frac{1.54 \text{ M}}{\bar{c}_{Cl^-}} + 1} \Rightarrow \bar{c}_{Cl^-} = 0.0065 \text{ M}$$



$$C_{\text{NaCl}} = 1.0 \text{ M: } \frac{c_{\text{Cl}^-}}{c_{\text{Cl}^-}} = \sqrt{\frac{c_{\text{R}^-}}{c_{\text{Cl}^-}} + 1} \Leftrightarrow \frac{1.0 \text{ M}}{c_{\text{Cl}^-}} = \sqrt{\frac{1.54 \text{ M}}{c_{\text{Cl}^-}} + 1} \Rightarrow \bar{c}_{\text{Cl}^-} = 0.492 \text{ M}$$

These two concentration of chloride inside the membrane are inserted into the expression for the transport numbers which are then calculated:

$$C_{\text{NaCl}} = 0.1 \text{ M: } \bar{t}_+ = \frac{1}{1 + \frac{c_{\text{Cl}^-}}{c_{\text{Cl}^-} + c_{\text{R}^-}}} = \frac{1}{1 + \frac{0.0065 \text{ M}}{0.0065 \text{ M} + 1.54 \text{ M}}} = 0.996$$

$$C_{\text{NaCl}} = 1.0 \text{ M: } \bar{t}_+ = \frac{1}{1 + \frac{c_{\text{Cl}^-}}{c_{\text{Cl}^-} + c_{\text{R}^-}}} = \frac{1}{1 + \frac{0.492 \text{ M}}{0.492 \text{ M} + 1.54 \text{ M}}} = 0.805$$

It is thus seen that the transport numbers inside the ion exchange membranes are relatively dependent on the bulk concentrations. At low concentrations the transport number of cations is close to 1 which is also stated in equation ( 7 ) on page 13 but when the bulk concentration is increased the transport number decreases.

The concepts mentioned and explained in this introduction section are all important terms concerning electrically driven membrane processes. In following section the heavyweight of all electrically driven membrane processes will be introduced and explained in details; we are going into the world of electro dialysis.

## 2. Electrodialysis

Electrodialysis is an electrically driven membrane process in which electrically charged membranes (ion exchange membranes) are used to remove ions from aqueous solutions by use of an electrical field.

Electrodialysis finds many applications such as:

- Production of potable water by desalination
- Production of salt from seawater
- Removal of salts and acids from pharmaceutical solutions
- Removal of salts and acids in food processing
- Recovery of water and valuable metal ions from industrial effluents

In this chapter the basic concepts of electrodialysis will be presented together with equation describing different parameters and important terms concerning the operation of electrodialysis systems. Relevant examples from experiments done on a smaller electrodialysis system will be included in order to show how the described theory can be utilized in practice. The energy consumption will also be described by using different equations and considerations.

Please click the advert



**Brain power**

By 2020, wind could provide one-tenth of our planet's electricity needs. Already today, SKF's innovative know-how is crucial to running a large proportion of the world's wind turbines.

Up to 25 % of the generating costs relate to maintenance. These can be reduced dramatically thanks to our systems for on-line condition monitoring and automatic lubrication. We help make it more economical to create cleaner, cheaper energy out of thin air.

By sharing our experience, expertise, and creativity, industries can boost performance beyond expectations. Therefore we need the best employees who can meet this challenge!

**The Power of Knowledge Engineering**


Plug into The Power of Knowledge Engineering.  
Visit us at [www.skf.com/knowledge](http://www.skf.com/knowledge)

**SKF**

Download free ebooks at [bookboon.com](http://bookboon.com)

## 2.1 Basic concept

The basic principle in electrodialysis is that two electrodes are separated by cation exchange membranes and anion exchange membrane placed in an alternating way. A sketch of an electrodialysis system is shown in Figure 4.

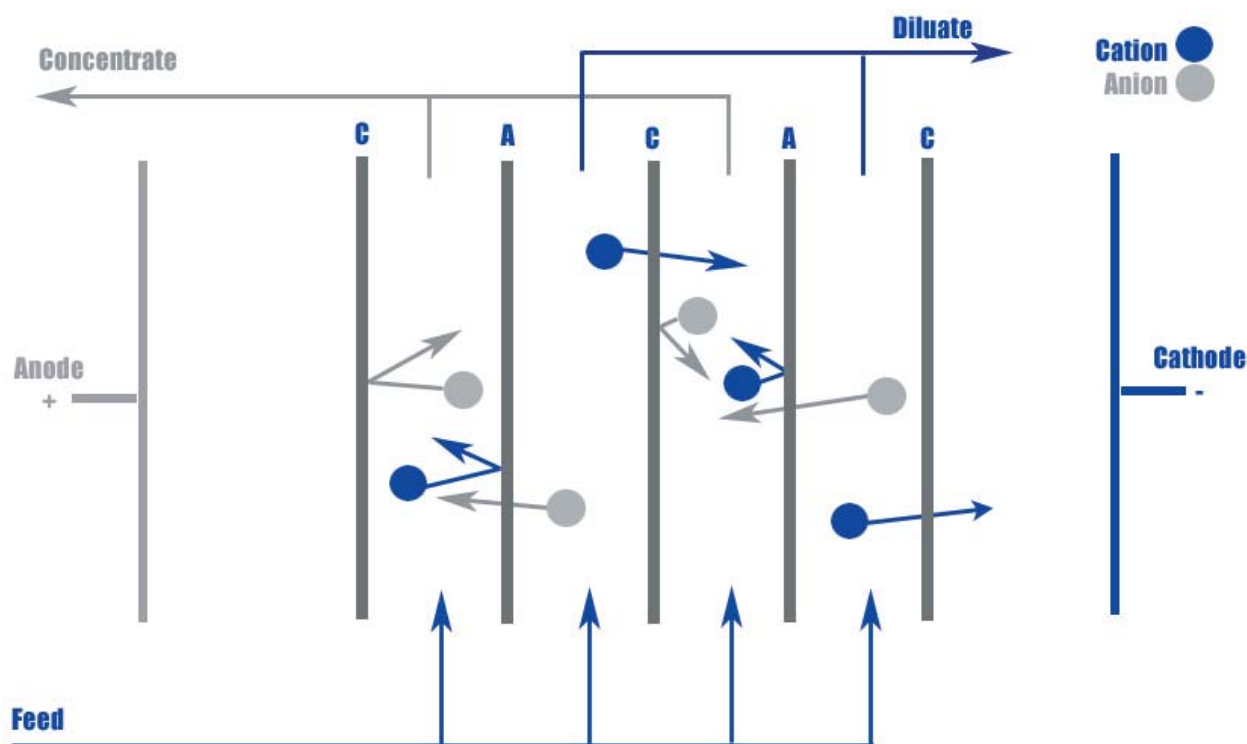


**Figure 4: Electrodialysis system**

*Schematic representation of the principle behind electrodialysis. A: Anion exchange membrane, C: Cation exchange membrane. Two electrodes (anode and cathode) are separated between cation exchange membranes and anion exchange membranes placed in an alternating way. In the electrical field, anions will migrate towards the anode and cations towards the cathode.*

The feed solution (saline water for example) is pumped into the chambers between the ion exchange membranes. When a voltage difference is established between the anode and the cathode the anions will start to migrate towards the anode and the cations will start to migrate towards the cathode. The anions are only able to pass anion exchange membranes and cations are only able to pass cation exchange membranes. Thus an anion is only able to pass one anion exchange membrane whereas it is rejected by cation exchange membranes. On the other hand cations are only able to pass cation exchange membranes and are rejected by anion exchange membranes. This means that when you are looking at Figure 4 every second chamber will increase in concentration (concentrate) and every second chamber will decrease in concentration (diluate). The two chambers closest to the electrodes are called electrode chambers. In these

electrode chambers the following electrode reactions take place when sodium chloride solutions are used as feed solution:



It is thus seen that when electrodialysis is done on sodium chloride solutions, chlorine and oxygen gas is produced at the anode and hydrogen gas is produced at the cathode. This is not wanted and this is the reason (among other aspects) that electrodialysis systems often consists of up to several hundreds of cell pair placed in parallel in order to minimize the irreversible energy consumption associated with producing gasses at the electrodes. By definition one cell pair consists of the following:

- One cation exchange membrane
  - One anion exchange membrane
  - One concentration chamber
  - One dilution chamber
- } One cell pair

In commercial electrodialysis systems up to 500 cell pairs ( $n = 500$ ) are placed in parallel in a so-called *membrane stack*. The maximum number of cell pairs is determined by practical considerations such as maximum allowed voltage over the whole stack, stability of the stack and the ability of the system to supply the individual chamber equally with feed solution. By using such a membrane stack the applied driving force is utilized very efficiently. The net result of the electrodialysis process is that at the outlet from the membrane stack diluted and concentrated solutions can be collected from the alternating chambers. The ion exchange membranes are separated by spacers. The flow channels in these spacers can have different geometries that can be optimized in order to minimize the concentration polarization in the boundary layer and thus increase the mass transfer coefficient. We will go more into details about that later. Normally two types of spacers can be distinguished: Sheet-flow spacers and tortuous-path spacers. In the sheet flow spacers the velocity is relative low and the residence time is low as well, whereas the residence time in tortuous-path spacers is much larger. The velocity in the tortuous-path spacers is also much larger (which decreases the concentration polarization problems) since the flow channel constitutes a long flow path with many turns. On the other hand the pressure drop is generally larger in a tortuous-path spacer than in a sheet-flow spacer. This gives a larger pump energy consumption (this will be explained in section 2.5.1 *Pump energy*). In electrodialysis systems three pumps are normally required:

- Pump for electrode solution
- Pump for concentrate solution
- Pump for diluate solution

Thus in energy calculation those three pumps normally have to be taken into consideration when the total energy consumption is to be calculated and evaluated. This will be described in more details in section 2.5 *Energy requirement*.

## 2.2 Critical current and critical current density

When a voltage different is applied between the two electrodes, current flows between the two electrodes in the form of ions. Below a certain *critical current* the voltage difference is proportional to the current according to Ohm's law which can be written as follows:

$$I = \frac{1}{R} \cdot E \quad (\text{Current}), \quad SI - \text{units} : I = \left[ \frac{C}{s} = \frac{1}{\left(\frac{J \cdot s}{C^2}\right)} \cdot \frac{J}{C} = \frac{C}{s} \right] \quad (8)$$

$$i = -\sigma \cdot \frac{dE}{dx} \quad (\text{Current density}), \quad SI - \text{units} : i = \left[ \frac{C}{s \cdot m^2} = \frac{C^2}{J \cdot s \cdot m} \cdot \left(\frac{J}{C}\right) = \frac{C}{s \cdot m^2} \right]$$

Please click the advert

**See the light!**  
**The sooner you realize we are right,**  
**the sooner your life will get better!**

A bit over the top? Yes we know!

We are just that sure that we can make your media activities more effective.



Get "Bookboon's Free Media Advice"  
 Email [kbm@bookboon.com](mailto:kbm@bookboon.com)



CREDIT SUISSE

DAIMLER



Microsoft

[bookboon.com](http://bookboon.com)


In the general form of Ohm's law we see proportionality between the current ( $C/s$ ) and the voltage ( $J/C$ ). The term " $R$ " is the electrical resistance ( $J \cdot s / C^2 = \Omega$ , Ohm). Ohm's law can also be written in a "flux form" by dividing the current with the area (of the membrane). By doing this you get the current density (Coulomb/sec/area =  $C/(s \cdot m^2)$ )  $i$  and then the term " $\sigma$ " is the electrical conductance ( $C^2/(J \cdot s \cdot m)$ ). The current density is then proportional to the voltage gradient ( $J/(C \cdot m)$ ) The "flux form" of Ohm's law is a general way of describing different kinds of transport from phenomenological equations. Similar kinds of transport can be mentioned<sup>1</sup>:

- Transport of mass by diffusion (Fick's law)
- Transport of energy by heat conduction (Fourier's law)
- Transport of momentum by shear (Newton's law of viscosity)
- Transport of volume by pressure (Darcy's law)

If an ion exchange membrane is completely selective, one equivalent of ions will be transported through the ion exchange membrane pr. Faraday used electrical current. The Faraday number is 96485 Coulomb pr. equivalent. This means that one mole of salt (NaCl) is removed pr. Faraday electrical current because sodium and chloride ions both have valences  $z$  of 1 eq./mole. If the electrodialysis membrane stack then consists of  $n$  cell pairs,  $n$  moles of NaCl will be removed pr. Faraday electrical current. In general,  $n$  equivalents of salt are removed pr. Faraday electrical current.

Ohm's law is only valid below a certain *critical current*. A critical current exists because of concentration polarization phenomena in the laminar boundary layer at the membrane surfaces<sup>2</sup>. The polarization phenomenon is explained in Figure 5. The description here concerns the polarization phenomenon at cation exchange membranes.



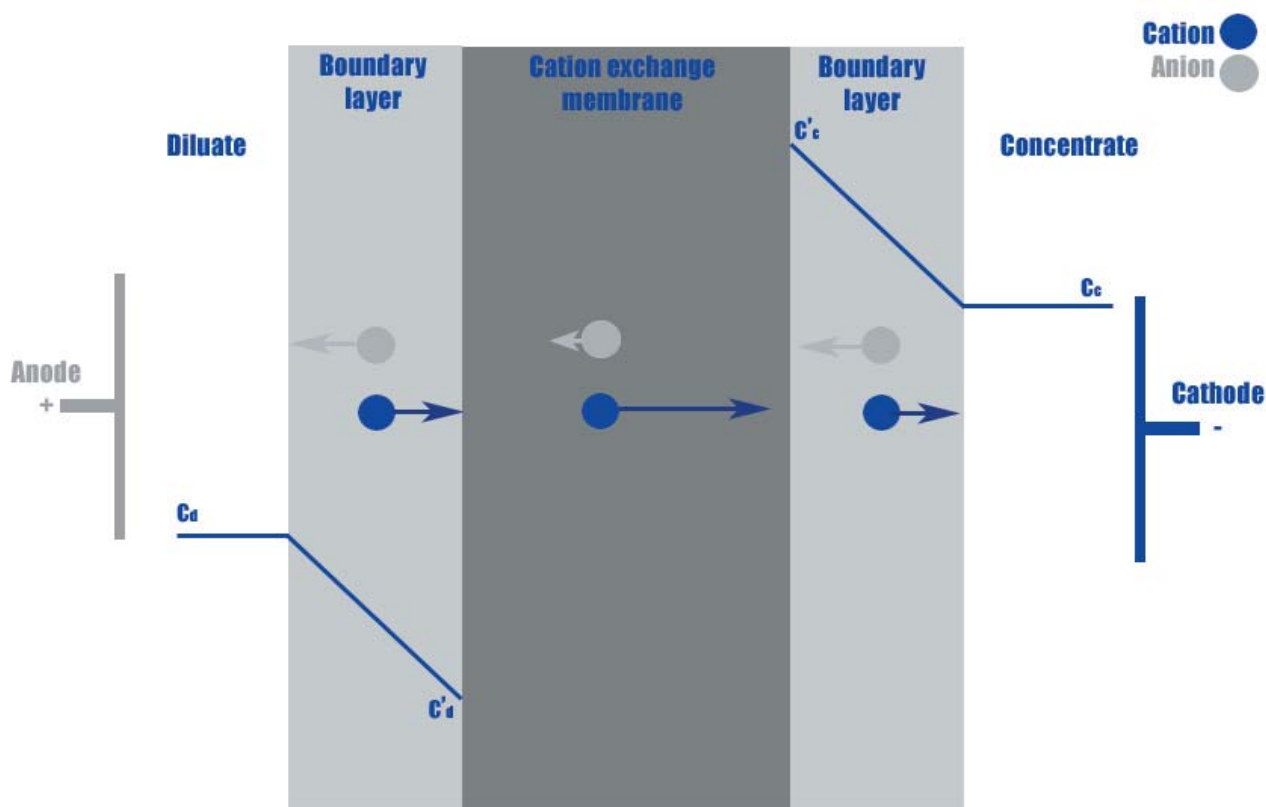

**Figure 5: Concentration polarization**

*Concentration polarization of cations in electro dialysis in the boundary layers at both sides of a cation exchange membrane at steady state. This phenomenon results in the existence of a critical current.*

In Figure 5 a cation exchange membrane is sketched and the concentration levels shown concerns the concentration of cations. The flow of anions is also sketched in Figure 5 in order to show the full picture. It is seen that the flow of anions inside the cation exchange membrane is almost zero which is explained by the fact that the transport number of anions inside the cation exchange membrane is almost zero according to equation ( 7 ) on page 13. The cations will migrate through the cation exchange membrane toward the cathode. On the right side of the membrane we have a concentration chamber and on the left side we have a dilution chamber. In the solutions both cations and anions ( $\text{Na}^+$  and  $\text{Cl}^-$ ) have almost equal transport numbers (value  $\sim \frac{1}{2}$ ) according to equation ( 7 ) on page 13. This means that they are transported in almost the same amount at constant applied voltage. Cations and anions are thus transported in the bulk solution and in the boundary layer with a transport number of  $\sim \frac{1}{2}$ . In the membrane cations are transported in a much larger amount than anions (see also Figure 3 on page 10) because of the negative incorporated charges which means that they are transported with transport number of almost 1. The ions are transported by diffusion and by the applied electrical driving force. This means that in the laminar boundary layer at both sides of the membrane at steady state there will be a linear concentration gradient as sketched in Figure 5. This is because the cations are transported in a much larger amount than anion inside the membrane than in the boundary layer. If we look at the left side of the membrane the ions are removed away from the left surface through the membrane faster than they are supplied by diffusion in the boundary layer. Thus a decreasing cation concentration is established in the left side boundary layer. At the right side of the membrane an accumulation of cations will initially

take place because the cations are transported in a much less amount in solution than in the membrane and thus they will be a concentration increase when leaving the membrane. When steady state is reached the cation concentration profile sketched in Figure 5 will exist.

Why is the concentration polarization a problem? In order to run an economically rentable electro dialysis process the overall electrical resistance of the membrane stack must not be too high. The electrical resistance of a single cell pair can be divided into four sub resistances which are all sketched in Figure 6.

## Trust and responsibility

NNE and Pharmaplan have joined forces to create NNE Pharmaplan, the world's leading engineering and consultancy company focused entirely on the pharma and biotech industries.

Inés Aréizaga Esteva (Spain), 25 years old  
Education: Chemical Engineer

– You have to be proactive and open-minded as a newcomer and make it clear to your colleagues what you are able to cope. The pharmaceutical field is new to me. But busy as they are, most of my colleagues find the time to teach me, and they also trust me. Even though it was a bit hard at first, I can feel over time that I am beginning to be taken seriously and that my contribution is appreciated.


Please click the advert



NNE Pharmaplan is the world's leading engineering and consultancy company focused entirely on the pharma and biotech industries. We employ more than 1500 people worldwide and offer global reach and local knowledge along with our all-encompassing list of services.  
[nnepharmaplan.com](http://nnepharmaplan.com)

nne pharmaplan®

Download free ebooks at [bookboon.com](http://bookboon.com)

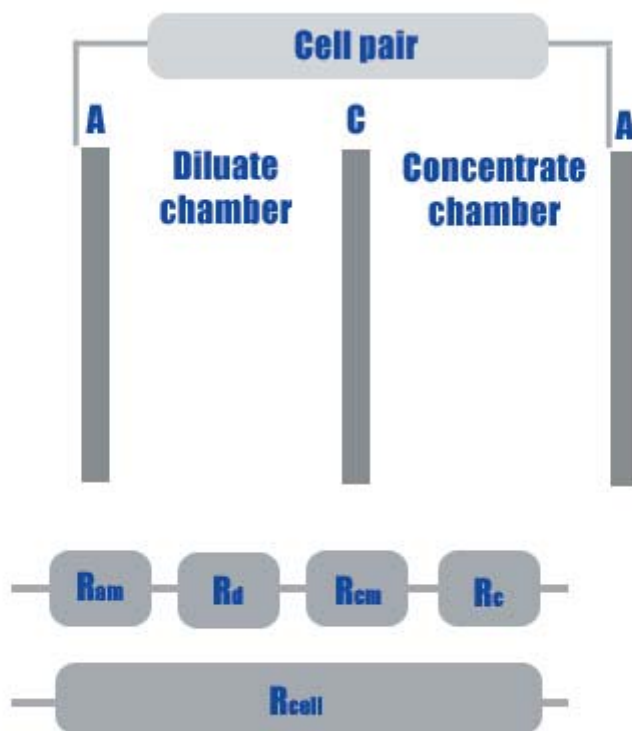

**Figure 6: Electrical sub resistances in a cell pair**

The overall electrical resistance of a cell pair can be divided into four sub resistances. A: Anion exchange membrane, C: Cation exchange membrane,  $R_{am}$ : Resistance of anion exchange membrane,  $R_{cm}$ : Resistance of cation exchange membrane,  $R_d$ : Resistance of diluate solution,  $R_c$ : Resistance of concentrate solution,  $R_{cell}$ : Total resistance of cell pair.

From Figure 6 it is seen that the electrical resistance of a single cell pair can be divided into the four following sub resistances:

- Resistance of anion exchange membrane,  $R_{am}$
- Resistance of diluate chamber,  $R_d$
- Resistance of cation exchange membrane,  $R_{cm}$
- Resistance of concentrate chamber,  $R_c$

The overall resist of a single cell pair ( $R_{cell}$ ) is the sum of the four sub-resistances. The resistance of the whole membrane stack consisting of  $n$  cell pair is thus given in equation ( 9 )

$$R_{\text{membrane stack}} = n \cdot R_{\text{cell}} = n \cdot (R_{am} + R_d + R_{cm} + R_c), \quad SI - \text{units} : R = \left[ \frac{J \cdot s}{C^2} \right] \quad (9)$$


The electrical resistance is very dependent on the ease of which the ions are transported and on the presence of ions since the ions constitute the electrical current. The electrical resistance of the ion exchange membranes are relatively low whereas the resistance in the diluate can become quite high because of low ion concentration. A large polarization on the left side of the membrane (Figure 5 on page

21) gives a very low ion concentration resulting in large electrical resistance. The polarization on right side of the membrane (Figure 5 on page 21) is not of great importance since it results in higher ion concentration which will not result in an enhanced electrical resistance<sup>3</sup>. Thus it is often the resistance in the diluate chambers that determines the overall resistance of the membrane stack because of low ion concentration at the membrane surface (low  $c'_d$ ) due to concentration polarization. Therefore the concentration polarization is a problem that has to be minimized in order to keep the overall electrical resistance and the energy requirement low.

When the current reaches a certain level the concentration polarization on the diluate side of the membrane (see Figure 5 on page 21) reaches a level where the cation concentration at the membrane surface  $c'_d$  reaches zero<sup>4</sup>. At that point the *critical current* is reached and Ohm's law (equation ( 8 ) on page 19) can no longer describe the association between current and voltage). When the concentration of cations is zero, water splitting at the membrane surface is observed:



The water splitting takes place in order to generate ions that can constitute the electrical current. When water starts to split, the  $OH^-$  ions can pass through the anion exchange membranes and the  $H^+$  ions can pass through the cation exchange membranes. This will affect the pH in the different chambers. When the current through a membrane stack is measured at increasing values of the voltage, the Current-Voltage plot will typically look as sketched in Figure 7.

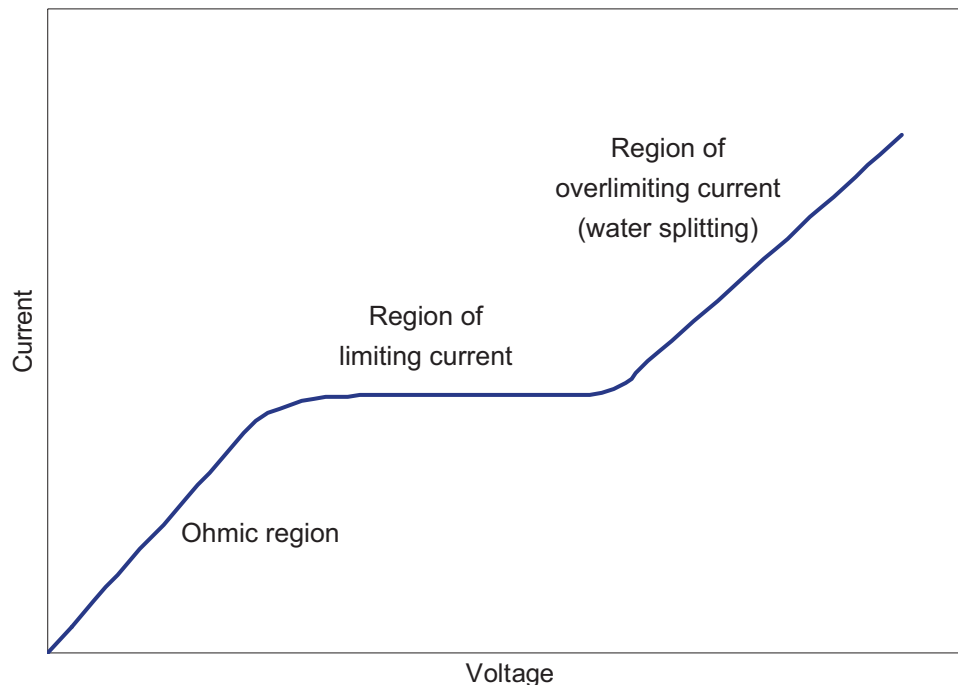

**Figure 7: Typically Current-Voltage plot**

The current at increasing values of the voltage. Three regions can normally be observed. I) Ohmic region, II) Region of limiting current and III) Region of overlimiting current (water splitting).

The initial region is described by Ohm's law and is thus called the Ohmic region. At a certain voltage there are not enough ions to transfer the charges which mean that the critical current is reached and the cation concentration at the cation exchange membrane surface on the diluate side is close to zero. Thus the current can not increase anymore even though the voltage is increased. This is the region of limiting current. When the voltage is further increased water molecules start to split at the membrane surface and thus "new" ions are generated that are able to increase the current. Thus at this point the current increases again at increasing voltage. This is the region of overlimiting current.

By setting up mathematical models for the cation transport through the cation exchange membrane sketched in Figure 5 on page 21, an expression for calculation of the critical current can be derived. First we look at Figure 8 in which the cation concentration profile between the dilute stream and the cation exchange membrane is sketched. It is in this area the concentration decrease towards zero leads to the existence of a critical current.

Please click the advert

**THE MILKWAY**  
LAUNCHING GRADUATE CAREERS

**MILKROUND SYSTEM**  
Become a business star with internships, placements, graduate jobs & schemes from leading companies.  
[www.milkround.com](http://www.milkround.com)


**PLANET CAREER ADVICE**  
Inhabited by insights into business careers and orbited by application advice.

**FIRST CONTACT**  
Get matched to top business employers via intelligent emails landing in your inbox.

**Milkround.com: rated the #1 graduate recruitment website in the UK Graduate Careers Survey 2009 of 16,000 university finalists.**

**Milkround.com**

Download free ebooks at [bookboon.com](http://bookboon.com)

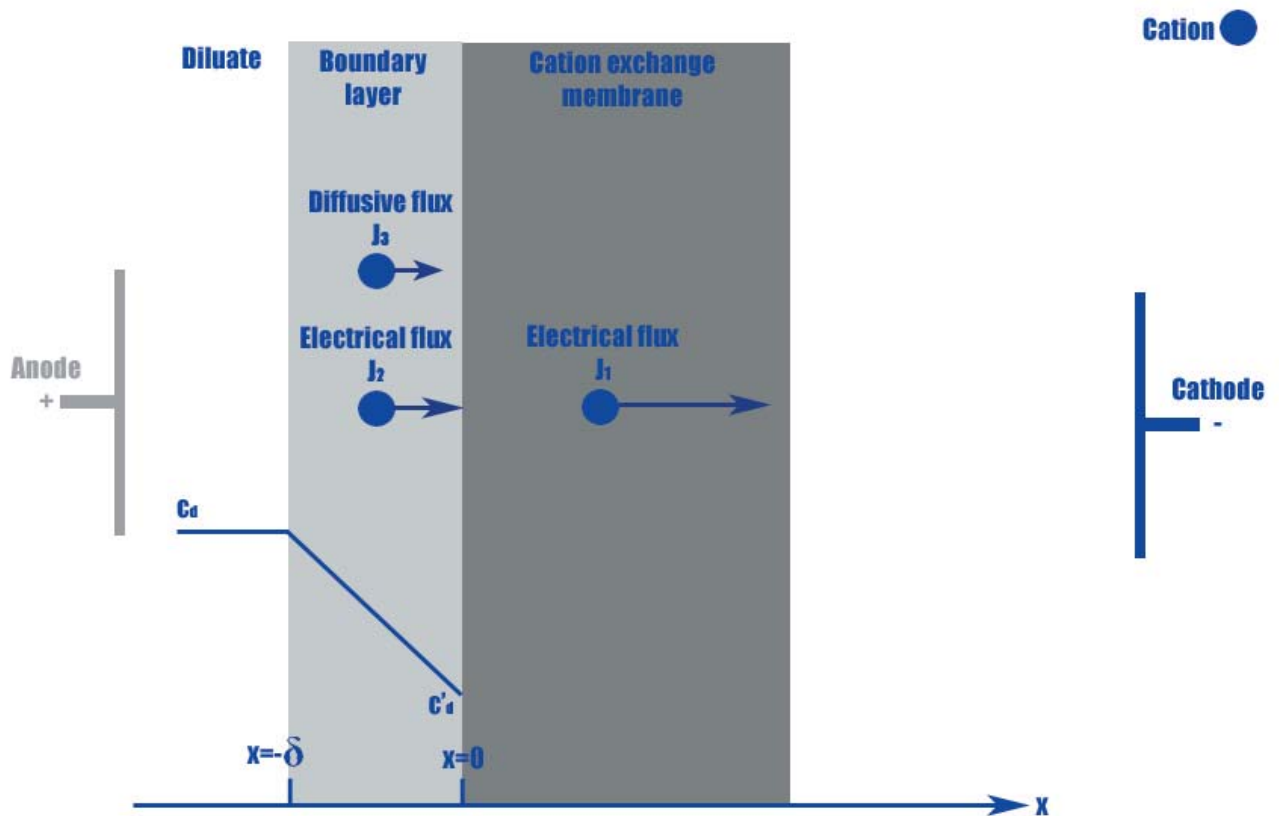

**Figure 8: Cation concentration profile**

The concentration profile of cations in the laminar boundary layer between the diluate stream and the cation exchange membrane. Two types of cation transport is sketched: Electrical transport due to electrical field (E-field) and diffusive transport due to concentration gradient.

In Figure 8, electrical and diffusive transport of salt ions (only cations in this case) is shown<sup>5</sup>. We are looking at the situation in steady state where a linear concentration decrease in the laminar boundary layer exists. When the current density (flux of charges) through the system is denoted  $i$ , the flux of cations in the membrane and in the boundary layer can be expressed as follows:

$$\left. \begin{aligned}
 J_1 &= \bar{t}_+ \cdot \frac{i}{z_+ \cdot F}, \text{ (Flux in membrane due to E - field)} \\
 J_2 &= t_+ \cdot \frac{i}{z_+ \cdot F}, \text{ (Flux in boundary layer due to E - field)}
 \end{aligned} \right\} SI - units : J = \left[ \frac{\left( \frac{C}{m^2 \cdot s} \right)}{\frac{eq.}{mole} \cdot \frac{C}{eq.}} = \frac{mole}{m^2 \cdot s} \right]$$

$$\left. J_3 = -D \cdot \frac{dc}{dx} \quad \text{(Diffusive flux in boundary layer)} \right\} SI - units : J = \left[ \frac{m^2}{s} \cdot \left( \frac{\frac{mole}{m^3}}{m} \right) = \frac{mole}{m^2 \cdot s} \right]$$

The fluxes  $J_1$  and  $J_2$  are caused by the electrical field (E-field) according to equation ( 4 ) on page12. The flux  $J_3$  is caused by the concentration gradient of cations in the boundary layer according to Darcy's law. At steady state a mole balance for the cations can be set up at the membrane surface which gives the



following first order differential equation with the following boundary conditions (BC). The direction of  $x$  is defined to go from the left to the right according to Figure 8 on page 26.

$$J_1 = J_2 + J_3 \Leftrightarrow \bar{t}_+ \cdot \frac{i}{z_+ \cdot F} = t_+ \cdot \frac{i}{z_+ \cdot F} - D \cdot \frac{dc}{dx} \Leftrightarrow$$

$$\frac{i}{z_+ \cdot F} \cdot (\bar{t}_+ - t_+) = -D \cdot \frac{dc}{dx} \quad (10)$$

$$\text{BC1: } x = -\delta \rightarrow c = c_d$$

$$\text{BC2: } x = 0 \rightarrow c = c'_d$$

Equation (10) can be integrated by use of the boundary conditions to yield an expression for the dependency between the current density and the bulk concentration (of the dilute stream) and the boundary layer thickness:

$$\frac{i}{z_+ \cdot F} \cdot (\bar{t}_+ - t_+) = -D \cdot \frac{dc}{dx} \Leftrightarrow \int_{-\delta}^0 \frac{i}{z_+ \cdot F} \cdot (\bar{t}_+ - t_+) dx = - \int_{c_d}^{c'_d} D \cdot dc \Leftrightarrow$$

$$\frac{i}{z_+ \cdot F} \cdot (\bar{t}_+ - t_+) \cdot \delta = -D \cdot (c'_d - c_d) \Leftrightarrow i = \frac{D \cdot (c_d - c'_d) \cdot z_+ \cdot F}{\delta \cdot (\bar{t}_+ - t_+)}$$

As mentioned earlier the critical current density is reached when the concentration of cations at the membrane surface ( $c'_d$ ) at the diluate side reaches zero. At this point water molecules start to split in order to generate “new” ions to conduct the current. An expression for the calculation the critical current density ( $i_{crit}$ ) can thus be derived by letting  $c'_d$  go to zero:

$$i_{crit} = \lim_{c'_m \rightarrow 0} \left( \frac{D \cdot (c_d - c'_d) \cdot z_+ \cdot F}{\delta \cdot (\bar{t}_+ - t_+)} \right) = \frac{D \cdot c_d \cdot z_+ \cdot F}{\delta \cdot (\bar{t}_+ - t_+)} = \frac{k \cdot c_d \cdot z_+ \cdot F}{(\bar{t}_+ - t_+)} \quad (\text{Critical current density})$$

$$I_{crit} = A_{membrane} \cdot \frac{k \cdot c_d \cdot z_+ \cdot F}{(\bar{t}_+ - t_+)} \quad (\text{Critical current}) \quad (11)$$

$$SI - units : I_{crit} = \left[ m^2 \cdot \frac{m}{s} \cdot \frac{mole}{m^3} \cdot \frac{eq.}{mole} \cdot \frac{C}{eq.} = \frac{C}{s} \right]$$

Again it is seen that the current is just the current density multiplied by the cross sectional area, which in this case is the area of one of the ion exchange membranes. The ratio between the diffusion coefficient and the boundary layer thickness can be replaced by  $k$  which is the mass transfer coefficient ( $k = D/\delta$ ). It is thus seen that the critical current density is a function of the concentration of cations in the bulk (diluate stream) and the boundary layer thickness (mass transfer coefficient). Therefore the critical current density is highly dependent of the hydrodynamic conditions and can be increased by decreasing the boundary layer thickness (increasing the mass transfer coefficient) for example by increasing the flow rate along the

membrane surface in the diluate chambers. The critical current density will also increase with increased ion concentration in the diluate since more ions will then be present to constitute the flow of charges (the current)<sup>6</sup>. Equation ( 11 ) can be used to calculate the critical current for a given electro dialysis system but often you don't know the mass transfer coefficient. Therefore you can do two things to determine the critical current for a given electro dialysis system:

- Experimental determination of critical current
- Determination of critical current from literature correlations

In the experimental determination you don't need to know the mass transfer coefficient. On the other hand, by estimation of the critical current from literature correlation you actually calculate the mass transfer coefficient (diffusion coefficient divided with the boundary layer thickness) and insert it into equation ( 11 ). It can often be a good idea to do both things in order to get a more accurate picture of the level of the critical current and to check whether your flow and mass transfer in the system can be described by the well known correlation from the literature. In the following two sections we shall see how the critical current can be determined from experiments and from literature correlations.

Please click the advert

# “ Top legal people rate The Open University ”

...and some of them are pretty good judges

Raise the bar with top legal courses

Developed in partnership with The College of Law

**The College of Law**  
of England and Wales

**Boost your legal career**

[▶ Find out more](#)

**INSPIRING LEARNING**



**The Open University**




Download free ebooks at [bookboon.com](http://bookboon.com)

### 2.2.1 Experimental determination of critical current

In a given electrodialysis system the critical current can be determined by measuring the current (with an ampere meter) through the membrane stack as a function to the voltage. Then you can plot the current vs. the voltage and determine the critical current as the point where the curve flattens as in Figure 7 on page 24. This can however often be quite uncertain because the curve often does not flatten so much. Another approach can sometimes be more accurate. The resistance can be plotted vs. the reciprocal value of the current. By doing this, the level of the current (reciprocal value of the current) where the resistance is constant (the Ohm's law region) and the level of the current where the resistance starts to increase (the region of limiting current) can be determined more accurate. The resistance is calculated as  $E/I$  according to Ohm's law (equation (8) on page 19). In the following example the critical current will be determined from actual electrodialysis experiments according to these two approaches.

#### Example B: Experimental determination of critical current

For an electrodialysis system consisting of 20 cell pairs the current is measured at different values of the voltage between 0 and 50 volts. The data are plotted in an "I vs. E plot" and an "E/I vs. 1/I plot" which is shown in Figure 9. Sodium chloride solutions are used as feed solutions.

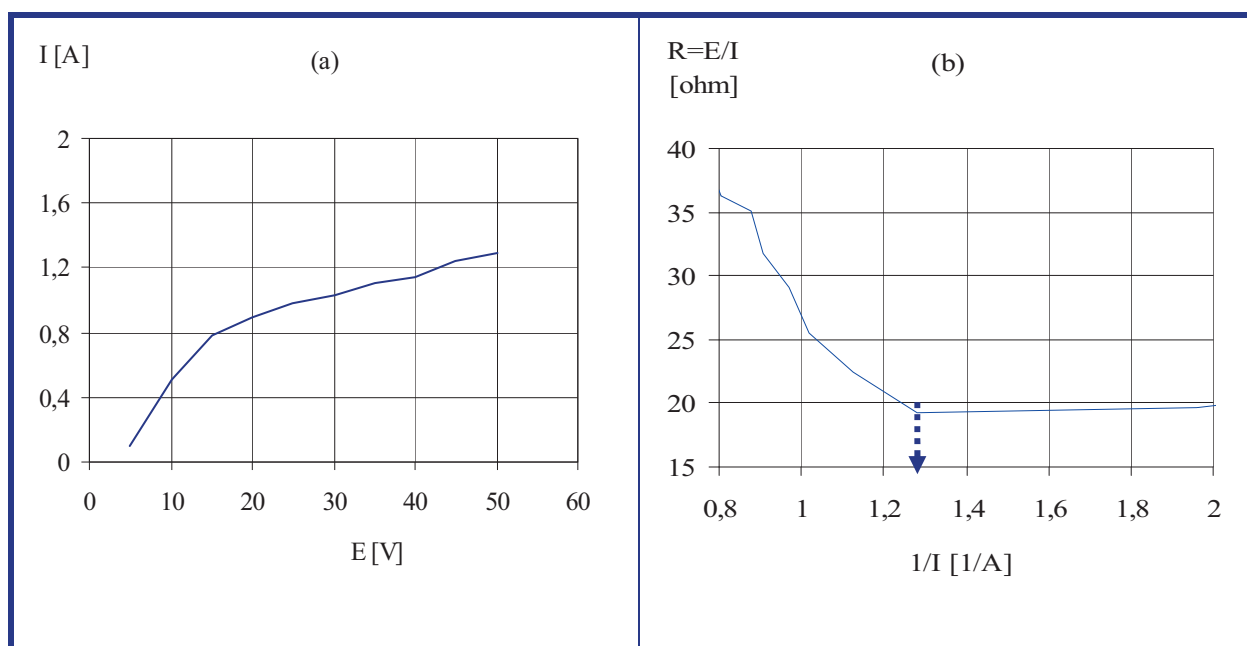

**Figure 9: Experimental determination of critical current**

(a) The current through the membrane stack as a function of the voltage. (b) The resistance ( $E/I$ ) as a function of  $1/I$ . The critical current in this case is most easily identified on the right plot indicated by the blue arrow. Constant flow rate.

It is seen that the curve (Figure 9a) has the same sequence as the initial sequence of the typical current-voltage plot shown in Figure 7 page 24. Up to around 15 volt linear relationship between the current and voltage exists according to Ohm's law. Above ~ 15 volt the curve is flattened but identification of an actual critical current is from this plot difficult. By plotting the resistance of the membrane stack (voltage divided by the current) as a function of the reciprocal value of the current, the critical current can be identified as the point where the resistance starts to increase when going from the right to the left on the curve in Figure 9b. Ohm's law assumes a constant resistance which is seen on the right part of the curve. At high values of the current (low values of  $1/I$ ) the resistance starts to increase indicating that the Ohmic region is exceeded and the region of limiting current is entered. The point where the curve breaks is identified as the critical current, which in this case can be estimated to:

$$I_{crit} = \frac{1}{1.28 A^{-1}} = 0.78 A$$

This value of 0.78 A would have been more uncertain determined if only Figure 9a had been used.

The critical current density can then be calculated by dividing the critical current with the area of one of the ion exchange membranes in the membrane stack.

### 2.2.2 Determination of critical current from literature correlations

As mentioned earlier the critical current can experimentally be determined by plotting data of the current as a function of the voltage. On the other hand in order to calculate the critical current by use of equation ( 11 ) on page 27 you need to have a value for the mass transfer coefficient.

One way to get a value for the mass transfer coefficient is to use different flow correlations from the literature that combines different dimensionless numbers concerning flow and mass transfer. These dimensionless numbers are:

$$\begin{aligned} \text{Reynolds number : } \text{Re} &= \frac{d_h \cdot u}{\nu}, \quad \text{SI - units : } \text{Re} = \left[ \frac{m \cdot \left(\frac{m}{s}\right)}{\left(\frac{m^2}{s}\right)} \right] = [-] \\ \text{Schmidt number : } \text{Sc} &= \frac{\nu}{D}, \quad \text{SI - units : } \text{Sc} = \left[ \frac{\left(\frac{m^2}{s}\right)}{\left(\frac{m^2}{s}\right)} \right] = [-] \\ \text{Sherwood number : } \text{Sh} &= \frac{k \cdot d_h}{D}, \quad \text{SI - units : } \text{Sh} = \left[ \frac{\left(\frac{m}{s}\right) \cdot m}{\left(\frac{m^2}{s}\right)} \right] = [-] \end{aligned} \quad (12)$$

The hydraulic diameter of the flow channel is denoted  $d_h$ . The Reynolds number includes the flow velocity  $u$  and thus tells whether the flow is in the laminar or turbulent region. The Schmidt number is the ratio between the kinematic viscosity  $\nu$  and the diffusion coefficient  $D$  and thus the Schmidt number tells how fast velocity is propagated through the fluid compared to how fast mass propagates (diffuses) through the fluid. The Sherwood number includes the mass transfer coefficient  $k$  and by using correlations combining these three dimensionless number given in equation ( 12 ) you can estimate the mass transfer coefficient. Such correlations are shown in Table 2.

Please click the advert



## Sharp Minds - Bright Ideas!

Employees at FOSS Analytical A/S are living proof of the company value - First - using new inventions to make dedicated solutions for our customers. With sharp minds and cross functional teamwork, we constantly strive to develop new unique products - Would you like to join our team?

FOSS works diligently with innovation and development as basis for its growth. It is reflected in the fact that more than 200 of the 1200 employees in FOSS work with Research & Development in Scandinavia and USA. Engineers at FOSS work in production, development and marketing, within a wide range of different fields, i.e. Chemistry, Electronics, Mechanics, Software, Optics, Microbiology, Chemometrics.

**We offer**  
*A challenging job in an international and innovative company that is leading in its field. You will get the opportunity to work with the most advanced technology together with highly skilled colleagues.*

*Read more about FOSS at [www.foss.dk](http://www.foss.dk) - or go directly to our student site [www.foss.dk/sharpminds](http://www.foss.dk/sharpminds) where you can learn more about your possibilities of working together with us on projects, your thesis etc.*

The Family owned FOSS group is the world leader as supplier of dedicated, high-tech analytical solutions which measure and control the quality and production of agricultural, food, pharmaceutical and chemical products. Main activities are initiated from Denmark, Sweden and USA with headquarters domiciled in Hillerød, DK. The products are marketed globally by 23 sales companies and an extensive net of distributors. In line with the corevalue to be 'First', the company intends to expand its market position.

Dedicated Analytical Solutions

FOSS  
 Slangerupgade 69  
 3400 Hillerød  
 Tel. +45 70103370  
[www.foss.dk](http://www.foss.dk)



Download free ebooks at [bookboon.com](http://bookboon.com)

**Table 2: Flow correlations**<sup>7</sup>

Different flow correlations for different flow regimes and flow geometries.

	Laminar flow	Turbulent flow
Tube geometry	$Sh = 1.62 \cdot (Re \cdot Sc \cdot d_h / L)^{0.33}$	$Sh = 0.04 \cdot Re^{0.75} \cdot Sc^{0.33}$
Channel geometry	$Sh = 1.85 \cdot (Re \cdot Sc \cdot d_h / L)^{0.33}$	

How can these correlations be used to find the mass transfer coefficient and how can we then afterward calculate the critical current? These questions are most easily answered by looking at an example.

### Example C: Determination of critical current from literature correlations

We are looking at a lab scale electrodialysis system at which an experiment with NaCl solution is conducted. From current and voltage data a critical current of 5.55 A has been determined by the method sketched in Example B on page 29. Relevant experimental parameters are given in Table 3.

**Table 3: Experimental parameters**

Relevant experimental parameters for an electrodialysis experiment done with a lab scale electrodialysis system.

Cell pairs, $n$	Area of one membrane, $A_{\text{membrane}}$	Mean log. diluate conc., $c_d$	Total diluate flow, $Q_d$	Spacer flow channel		
				height	Width	Length, $L$
20	218 cm <sup>2</sup>	$7.44 \times 10^{-5}$ mole/cm <sup>3</sup>	11.72 g/s	0.10 cm	0.61 cm	~ 18 cm

First of all we have to know whether we are in the turbulent or laminar region. For this purpose we have to calculate the Reynolds number according to equation ( 12 ) on page 31. We have to know the kinematic viscosity, the diluate flow velocity and the hydraulic diameter of the diluate flow spacer channel. The kinematic viscosity of water at 20°C is used (0.01 cm<sup>2</sup>/s) since the solution is very dilute. The total flow in the 20 diluate channels  $Q_d$  (we have 20 diluate channels since there are a total of 20 cell pairs) is 11.72 g/s. Since the solution is quite diluted we use the density of water. The flow  $q_d$  in each of the 20 channels is therefore:

$$q_d = \frac{Q_d}{n} = \frac{11.72 \frac{\text{g}}{\text{s}}}{20} \approx \frac{11.72 \frac{\text{ml}}{\text{s}}}{20} = 0.59 \frac{\text{ml}}{\text{s}} = 0.59 \frac{\text{cm}^3}{\text{s}}$$

The flow velocity  $u$  can be calculated by dividing the flow  $q_d$  with the cross sectional area of the flow channel. The cross sectional area is product of the channel height and width in the spacer (0.10 cm × 0.61 cm = 0.061 cm<sup>2</sup>):

$$u = \frac{q_d}{A_{channel}} = \frac{0.59 \frac{cm^3}{s}}{0.061 \frac{cm^2}{s}} = 9.61 \frac{cm}{s}$$

The hydraulic diameter of the spacer channel is also calculated:

$$d_h = 4 \cdot \frac{A_{channel}}{L_{wet\ periphery}} = 4 \cdot \frac{0.061 \frac{cm^2}}{2 \cdot (0.61cm + 0.10cm)} = 0.17 \text{ cm}$$

Now we can calculate the Reynolds number according to equation ( 12 ) on page 31:

$$Re = \frac{d_h \cdot u}{\nu} = \frac{0.17 \text{ cm} \cdot 9.61 \frac{cm}{s}}{0.01 \frac{cm^2}{s}} = 165$$

Since the Reynolds number is relatively low we assume that we are in the laminar region. In order to calculate the Sherwood number according to the laminar “channel flow” correlation in Table 2 (page 32), we first have to calculate the Schmidt number according to equation ( 12 ). The diffusion coefficient of NaCl in water is roughly  $1.5 \times 10^{-5} \text{ cm}^2/\text{s}$ :

$$Sc = \frac{\nu}{D} = \frac{0.01 \frac{cm^2}{s}}{1.5 \cdot 10^{-5} \frac{cm^2}{s}} = 666.7$$

The correlation from Table 2 on page 32 is used to calculate the Sherwood number. The spacer channel length is approximately 18 cm.

$$Sh = 1.85 \cdot (Re \cdot Sc \cdot d_h / L)^{0.33} = 1.85 \cdot \left( 165 \cdot 666.7 \cdot \frac{0.17 \text{ cm}}{18 \text{ cm}} \right)^{0.33} = 18.31$$

The mass transfer coefficient can be calculated from the Sherwood number according to equation ( 12 ) on page 31:

$$Sh = \frac{k \cdot d_h}{D} \Leftrightarrow k = \frac{Sh \cdot D}{d_h} = \frac{18.31 \cdot 1.5 \cdot 10^{-5} \frac{cm^2}{s}}{0.17 \text{ cm}} = 1.6 \cdot 10^{-3} \frac{cm}{s}$$



With this value of the mass transfer coefficient the critical current can be calculated according to equation (11) on page 27 with a mean logarithmic diluate concentration of  $7.44 \times 10^{-5}$  mole/cm<sup>3</sup>. We use a mean logarithmic concentration in the diluate chambers since the concentration changes from the inlet to the outlet.

$$I_{crit} = A_{membrane} \cdot \frac{k \cdot c_b \cdot z_+ \cdot F}{(t_+ - t_-)} = 218 \text{ cm}^2 \cdot \frac{1.6 \cdot 10^{-3} \frac{\text{cm}}{\text{s}} \cdot 7.44 \cdot 10^{-5} \frac{\text{mole}}{\text{cm}^3} \cdot 1 \frac{\text{eq.}}{\text{mole}} \cdot 96485 \frac{\text{C}}{\text{eq.}}}{(1 - 1/2)} = 5.0 \text{ A}$$

It is seen that this value is close to the experimentally determined critical current of 5.55 ampere, and thus the flow correlations apparently gives a good approximation for the mass transfer coefficient and thus for the calculation of the critical current. Of course there are uncertainties. For example the diffusion coefficient is concentration dependent and the linear length of the flow channel is also not so easy to define since the channels are equipped with insert and it is a question if you can talk about a linear flow channel length at all. But anyway the use of literature correlations can lead you to get an idea of level of the mass transfer coefficient and thus the critical current.

Please click the advert

## The Wake

the only emission we want to leave behind

Low-speed Engines Medium-speed Engines Turbochargers Propellers Propulsion Packages PrimeServ

The design of eco-friendly marine power and propulsion solutions is crucial for MAN Diesel & Turbo. Power competencies are offered with the world's largest engine programme – having outputs spanning from 450 to 87,220 kW per engine. Get up front! Find out more at [www.mandieselturbo.com](http://www.mandieselturbo.com)

Engineering the Future – since 1758.

**MAN Diesel & Turbo**



Download free ebooks at [bookboon.com](http://bookboon.com)

### 2.2.3 Influence of hydrodynamic conditions on the critical current

As mentioned earlier and according to equation ( 11 ) on page 27 the critical current is proportional to the mass transfer coefficient. Since the mass transfer coefficient is very dependent on the hydrodynamic conditions in the membrane stack the critical current can be varied by changing for example the flow velocity in the diluate chambers. Experimental values of the critical current at different flow velocities in the diluate chambers can be compared with the literature flow correlations. This can be useful if you want to see whether your flow and mass transfer in your electrodialysis system follow the well known literature correlations. The mass transfer coefficient can be expressed by the flow correlation for channel geometry given in Table 2 on page 32:

$$\left. \begin{aligned} \text{Sh} &= 1.85 \cdot (\text{Re} \cdot \text{Sc} \cdot d_h / L)^{0.33} \Leftrightarrow \\ k &= 1.85 \cdot \frac{D}{d_h} \cdot \left( \frac{u \cdot d_h}{\nu} \cdot \frac{\nu}{D} \cdot \frac{d_h}{L} \right)^{0.33} = u^{0.33} \cdot (C_1) \\ C_1 &= 1.85 \cdot \frac{D}{d_h} \cdot \left( \frac{d_h^2}{D \cdot L} \right)^{0.33} = \text{constant} \end{aligned} \right\} \text{correlation for laminar flow} \quad (13)$$

$$\left. \begin{aligned} \text{Sh} &= 0.04 \cdot \text{Re}^{0.75} \cdot \text{Sc}^{0.33} \Leftrightarrow \\ k &= 0.04 \cdot \frac{D}{d_h} \cdot \left( \frac{u \cdot d_h}{\nu} \right)^{0.75} \cdot \left( \frac{\nu}{D} \right)^{0.33} = u^{0.75} \cdot (C_2) \\ C_2 &= 0.04 \cdot \frac{D}{d_h} \cdot \left( \frac{d_h}{\nu} \right)^{0.75} \cdot \left( \frac{\nu}{D} \right)^{0.33} = \text{constant} \end{aligned} \right\} \text{correlation for turbulent flow}$$

These expressions for the mass transfer coefficient can be inserted into the expression for the critical current (equation ( 11 ) on page 27):

$$\frac{I_{crit}}{c_d} = k \cdot \frac{A_{membrane} \cdot z_+ \cdot F}{(\bar{t}_+ - t_+)} = k \cdot C_3 \Rightarrow \begin{cases} \frac{I_{crit}}{c_d} = u^{0.33} \cdot (C_1 \cdot C_3) & \text{(correlation for laminar flow)} \\ \frac{I_{crit}}{c_d} = u^{0.75} \cdot (C_2 \cdot C_3) & \text{(correlation for turbulent flow)} \end{cases} \quad (14)$$

$$C_1 = 1.85 \cdot \frac{D}{d_h} \cdot \left( \frac{d_h^2}{D \cdot L} \right)^{0.33}, \quad C_2 = 0.04 \cdot \frac{D}{d_h} \cdot \left( \frac{d_h}{\nu} \right)^{0.75} \cdot \left( \frac{\nu}{D} \right)^{0.33}, \quad C_3 = \frac{A_{membrane} \cdot z_+ \cdot F}{(\bar{t}_+ - t_+)}$$

The expressions in equation ( 14) give the dependency between critical current and hydrodynamic conditions (flow velocity). These expressions can be compared with experimental values of the critical current and diluate concentrations at different flow velocities. We are going to do such a comparison in the following example:

#### Example D: Influence of hydrodynamic conditions on the critical current

We are going to investigate the influence of the flow velocity on the critical current. Data from an electro dialysis experiment with NaCl solutions at three different flow velocities in the diluate chamber are given in Table 4. Again an electro dialysis system consisting of 20 cell pairs is used.

**Table 4: Critical current at different flow velocities**

*Experimental values for electro dialysis experiments with NaCl solutions at different flow velocities.*

Flow velocity in diluate chamber, $u$ [m/s]	Mean log. Conc. in diluate chamber, $c_d$ [mole/m <sup>3</sup> ]	Critical current*, $I_{crit}$ [A=C/s]
$6.50 \times 10^{-2}$	77.58	4,35
$7.37 \times 10^{-2}$	74.83	4,65
$9.61 \times 10^{-2}$	74.45	5,55

\* Experimentally determined as sketched in Example B on page 29

A mean logarithmic value for the diluate concentration is used since the concentration changes from the inlet to the outlet of the membrane stack. The data in Table 4 can be plotted together with the expressions given in ( 14) on page 35, but first the constants  $C_1$ ,  $C_2$  and  $C_3$  are to be calculated (SI-Units are used as in Table 4):

$$C_1 = 1.85 \cdot \frac{D}{d_h} \cdot \left( \frac{d_h^2}{D \cdot L} \right)^{0.33} =$$

$$1.85 \cdot \frac{1.5 \cdot 10^{-9} \frac{m^2}{s}}{0.17 \cdot 10^{-2} m} \cdot \left( \frac{(0.17 \cdot 10^{-2} m)^2}{1.5 \cdot 10^{-9} \frac{m^2}{s} \cdot 0.18 m} \right)^{0.33} \Leftrightarrow C_1 = 3.49 \cdot 10^{-5} \left( \frac{m}{s} \right)^{0.67}$$

$$C_2 = 0.04 \cdot \frac{D}{d_h} \cdot \left( \frac{d_h}{v} \right)^{0.75} \cdot \left( \frac{v}{D} \right)^{0.33} =$$

$$0.04 \cdot \frac{1.5 \cdot 10^{-9} \frac{m^2}{s}}{0.17 \cdot 10^{-2} m} \cdot \left( \frac{0.17 \cdot 10^{-2} m}{10^{-6} \frac{m^2}{s}} \right)^{0.75} \cdot \left( \frac{10^{-6} \frac{m^2}{s}}{1.5 \cdot 10^{-9} \frac{m^2}{s}} \right)^{0.33} \Leftrightarrow C_2 = 7.99 \cdot 10^{-5} \left( \frac{m}{s} \right)^{0.25}$$


$$C_3 = \frac{A_{membrane} \cdot z_+ \cdot F}{(t_+ - t_-)} = \frac{0.0218 m^2 \cdot 1 \frac{eq.}{mole} \cdot 96485 \frac{C}{eq.}}{(1 - 1/2)} \Leftrightarrow C_3 = 4206.8 \frac{m^2 \cdot C}{mol}$$

These constants can now be inserted into the expressions in equation ( 14):

$$\frac{I_{crit}}{c_b} = u^{0.33} \cdot (C_1 \cdot C_3) = u^{0.33} \cdot 0.15 \left( \frac{m}{s} \right)^{0.67} \cdot \frac{m^2 \cdot C}{mole} \quad (\text{laminar correlation})$$

$$\frac{I_{crit}}{c_b} = u^{0.75} \cdot (C_2 \cdot C_3) = u^{0.75} \cdot 0.34 \left( \frac{m}{s} \right)^{0.25} \cdot \frac{m^2 \cdot C}{mol} \quad (\text{turbulent correlation})$$

The natural logarithm of these expressions is plotted together with the data from Table 4 in Figure 10 in order to give straight lines.

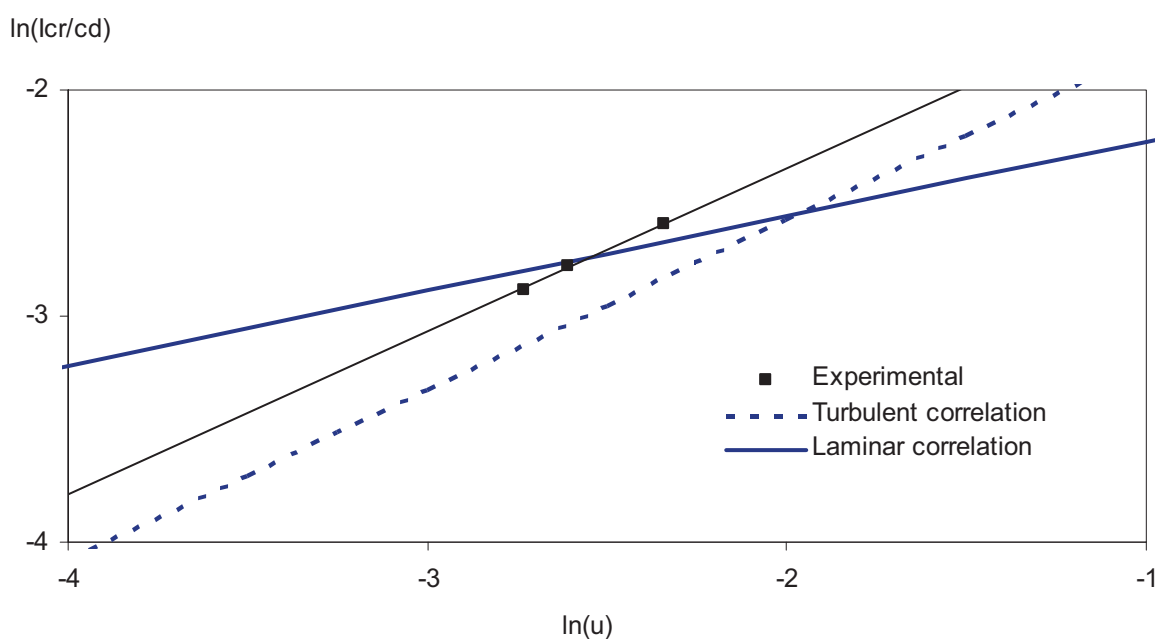

**Figure 10: Hydrodynamic influence on the critical current**

*Influence of hydrodynamic conditions (flow velocity) on the critical current visualized by plotting  $\ln(I_{crit}/c_d)$  vs.  $\ln(u)$ .  $I_{crit}$ : Critical current,  $c_d$ : diluate concentration (mean logarithmic value),  $u$ : flow velocity. Experimental data are plotted together with expressions from literature correlations for mass transfer at turbulent or laminar flow.*

In the plot one sees that the slope of the experimental values is close to the slope predicted by the turbulent correlation. This can be explained by the presence of turbulence promoters in the flow channels even though the Reynolds number is low. Overall the hydrodynamic influence (flow velocity) on the critical current seems to be well predicted by the literature correlations. One has to remember that many uncertainties are associated with using the flow correlations. The length of the flow channel for example is difficult to measure / estimate since many spacers have flow channels with many turns (tortuous-path spacers). Whether the flow is to be considered laminar or turbulent is also a question since many spacers are equipped with different insert in order to reduce the laminar boundary layer thickness and thus enhance the mass transfer coefficient. As mentioned earlier the diffusion coefficient is also concentration

dependent and not totally constant. Finally the used flow equation from Table 2 on page 32 are just a few of many different flow equations for many different flow geometries so there might be correlation in the literature that fits this particular electrodialysis system more accurate.


But overall the experimental values of critical current, diluate concentrations and flow velocities seem to fit the literature correlations concerning flow and mass transfer very well in our case.

## 2.3 Desalination degree

An import factor concerning the performance of an electrodialysis system is the desalination degree. The desalination degree indicates how large an amount of the salt in the diluate stream that is removed during one passage through the membrane stack. The desalination degree  $S$  can be calculated from the following equation:

$$S = \frac{c_{d,in} - c_{d,out}}{c_{d,in}}, \quad SI - units : \quad S = \frac{\left[ \frac{\text{mole}}{\text{m}^3} \right]}{\left[ \frac{\text{mole}}{\text{m}^3} \right]} = [-] \quad (15)$$

Please click the advert

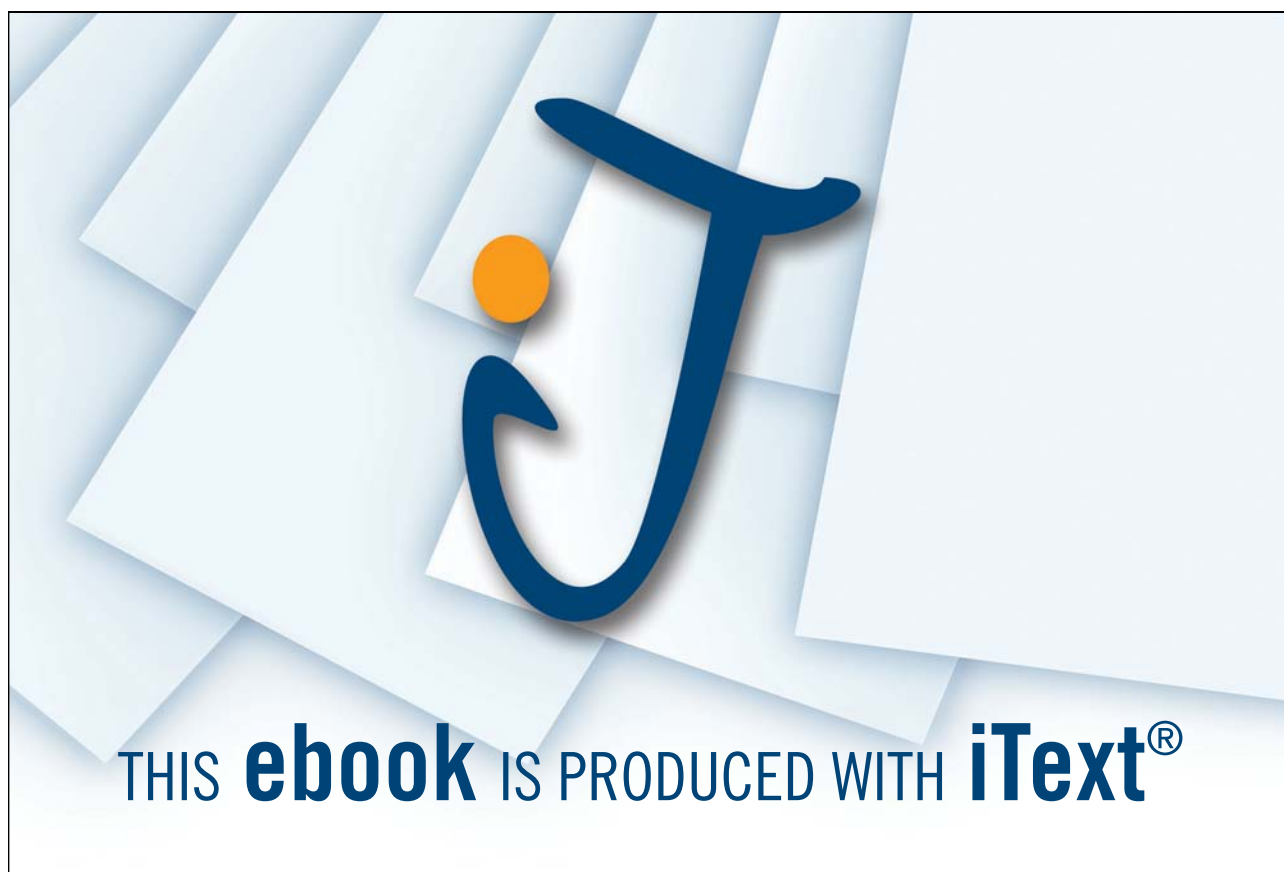

Download free ebooks at [bookboon.com](http://bookboon.com)

The concentration in the diluate is denoted  $c_d$  and from equation (15) it can be seen that the desalination degree can be determined from the diluate concentration that enters the dilution chambers and the diluate concentration that exits the dilution chambers. From the equation it is seen that a total desalination corresponds to a desalination degree of 1 (100 %). The desalination degree is (among different factors) influenced by the flow rate of the feed stream. This will be shown in the following example:

#### Example E: Desalination degree

In an electrodialysis system consisting of 20 cell pairs the outlet concentrations from the diluate chambers are measured for experiments conducted at different flow rates at constant inlet concentration of 0.2 M. The concentrations are measured at a voltage difference over the membrane stack of 10 volts and the feed consists of sodium chloride solutions. Data from the experiments are shown in Table 5.


#### Table 5: Desalination degree

*Feed concentration = 0.2 M, outlet concentration and desalination degree for experiments conducted at 10 volts at different flow velocities. Feed solutions consist of diluted sodium chloride.*

Flow rate [g/s]	Outlet concentration, $c_{d,out}$ [mole/l]	Desalination degree, S
5.74	0.150	0.25
7.52	0.160	0.20
9.22	0.165	0.18
11.29	0.175	0.13

It is seen that when the feed flow rate is increased the desalination degree decreases. The desalination degree vs. the total feed flow rate is plotted in Figure 11.



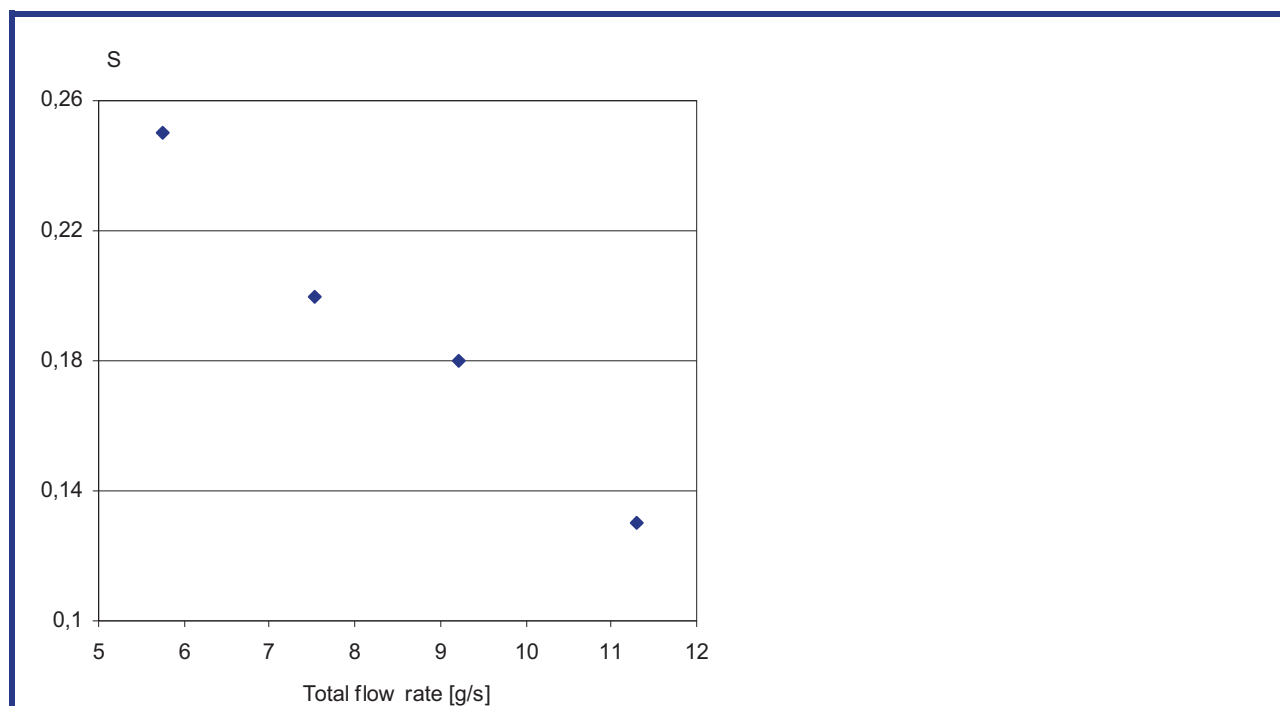

**Figure 11: Desalination degree vs. feed flow rate**

Desalination degree ( $S$ ) at different feed flow rates at a constant feed concentration ( $0.2\text{ M}$ ). Voltage =  $10\text{ V}$ .

The decreasing effect on the desalination degree at increasing feed flow rate is clearly seen in Figure 11. An increased feed flow rate decreases the time the salt spend in the diluate chamber in one passage and thus the possibility of desalination decreases.

## 2.4 Current efficiency

The current efficiency is also a relevant term to consider in the evaluation of an electrodialysis system operated at different conditions. The current efficiency tells how many equivalents of salt that has been removed from the diluate to the concentrate pr. transferred current equivalents. In the ideal case the current efficiency equals 1 which corresponds to the case where one current equivalent is able to remove one salt equivalent. The following equation can be used to calculate the current efficiency  $\eta$ :

$$\text{current efficiency} = \frac{\text{salt equivalents removed}}{\text{used current equivalents}} \Rightarrow$$

$$\eta = \frac{Q_d (c_{d,in} - c_{d,out}) \cdot z}{n \cdot \left(\frac{I}{F}\right)}, \quad SI - \text{units} : \eta = \frac{\left[ \frac{m^3}{s} \cdot \left(\frac{\text{mole}}{m^3}\right) \cdot \frac{\text{eq.}}{\text{mole}} \right]}{\left[ \frac{\left(\frac{C}{s}\right)}{\left(\frac{C}{\text{eq.}}\right)} \right]} = \left[ \frac{\left(\frac{\text{eq.}}{s}\right)}{\left(\frac{\text{eq.}}{s}\right)} \right] = [-] \quad (16)$$

Please click the advert

www.job.oticon.dk

**oticon**  
PEOPLE FIRST

Download free ebooks at [bookboon.com](http://bookboon.com)

The total flow rate in the dilution chambers is denoted  $Q_d$ , the number of cell pairs  $n$ ,  $I$  is the current,  $z$  is the valence of the salt ions (eq./mole,  $z = 1$  if we are dealing with NaCl solutions) and  $F$  is the Faraday number (96485 C/eq.). The number of salt equivalents removed from the diluate to the concentrate can thus be calculated as the difference between “in-“ and “out-concentration” multiplied by the flow rate and the valence of the ions. The number of used current equivalents is calculated as the current divided by the Faraday number. The number of cell pairs also has to be multiplied since every cell pair each transfers the same amount of current equivalents. From the SI-Units in equation ( 16) one sees that the current efficiency is dimensionless just as the desalination degree described in section 2.3 *Desalination degree* on page 38. In the following example we will see an application of equation ( 16) for calculating the current efficiency from real electrodialysis data.

### Example F: Current efficiency

An electrodialysis experiment is conducted at a small scale plant consisting of 20 cell pairs. A sodium chloride solution is used as feed stream and the in- and outlet concentration and the current is measured for an experiment conducted with a total diluate flow rate of 11.72 g/s and a voltage difference of 50 volts. Relevant parameters and experimental data are shown in Table 6.

**Table 6: Experimental parameters**

*Parameters and experimental data for an electrodialysis experiment conducted with a sodium chloride feed solution.*

Diluate flow rate, $Q_d$ [ $m^3/s$ ]	$11.72 \times 10^{-6}$
Diluate inlet concentration, $c_{d,in}$ [ $mole/m^3$ ]	160
Diluate outlet concentration, $c_{d,out}$ [ $mole/m^3$ ]	30
Number of cell pairs, $n$	20
Current, $I$ [ $A = C/s$ ]	8.09
Valence of salt ions, $z$ [eq./mole]	1
Faraday number, $F$ [C/eq.]	96485

The numbers given in Table 6 are directly inserted into equation ( 16) on page 41 in order to calculate the current efficiency:

$$\eta = \frac{Q_d (c_{d,in} - c_{d,out}) \cdot z}{n \cdot \left( \frac{I}{F} \right)} = \frac{11.72 \cdot 10^{-6} \frac{m^3}{s} \cdot (0.16 \cdot 10^3 - 0.03 \cdot 10^3) \frac{mole}{m^3} \cdot 1 \frac{eq.}{mole}}{20 \cdot \left( \frac{8.09 \frac{C}{s}}{96485 \frac{C}{eq.}} \right)} = 0.91$$

It is thus seen that the number of transferred salt equivalents are calculated from diluate inlet and outlet concentrations and the total diluate volume flow rate whereas the total number of current equivalents are determined from the current and the number of cell pairs. In this case it is thus seen that 0.91 equivalents of salt is removed pr. transferred equivalent of current.

## 2.5 Energy requirement

Evaluation of the energy consumption when running an electrodialysis system is of very great importance. Generally the energy consumption in electrodialysis can be divided into two parts:

- *Pump energy*: Energy to pump the solutions through the electrodialysis system
- *Electrical energy*: Electrical energy to transfer ions through the ion exchange membranes

The overall energy requirement is often dominated by one of these two terms depending on different process parameters and operation conditions.

### 2.5.1 Pump energy

In chemical engineering it is well known that the energy consumption associated with pumping liquids through a given system is dependent on the volume flow rate  $Q$ , the pressure drop in the system  $\Delta p$  and the efficiency of the pump  $\eta_{pump}$ . The pump energy can thus be calculated by use of the following equation:

$$\begin{aligned}
 \text{Pump energy: } \dot{E} &= \frac{Q \cdot \Delta p}{\eta_{pump}} \\
 \text{SI - units: } \dot{E} &= \left[ \frac{m^3}{s} \cdot Pa = \frac{m^3}{s} \cdot \frac{N}{m^2} = \frac{m \cdot N}{s} = \frac{J}{s} \right]
 \end{aligned}
 \tag{17}$$

Normally in an electrodialysis system three pumps are required as mentioned earlier:

- One pump to pump the solutions through the dilution chambers
- One pump to pump the solutions through the concentration chambers
- One pump to pump electrode solutions through the two electrode chambers

Thus the energy consumption to pump the solutions through an electrodialysis system can be calculated from knowledge of the pressure drops in the dilution-, concentration and electrode chambers, efficiencies of dilution-, concentration and electrode pumps and the volume flow rates in the three different types of chambers:

$$\dot{E}_{pump,total} = \frac{Q_d \cdot \Delta p_d}{\eta_d} + \frac{Q_c \cdot \Delta p_c}{\eta_c} + \frac{Q_e \cdot \Delta p_e}{\eta_e} \quad (18)$$

The sup-scripts  $d$ ,  $c$  and  $e$  refer to the diluate, concentrate and electrode solutions respectively. The volume flow rates are normally easy to measure but determining the actual pressure drop in the three circuits can be more uncertain and difficult to measure.

### 2.5.2 Electrical energy

The energy consumption associated with removing ions from the diluate to the concentrate through the ion exchange membranes is proportional to the current  $I$  flowing through the membrane stack and the total voltage drop  $E$  between the two electrodes over the whole membrane stack. This energy consumption can be expressed as follows:

$$\text{Electrical energy: } \dot{E}_{electrical} = I \cdot E, \quad SI - units: \quad \dot{E} = \left[ \frac{C}{s} \cdot \frac{J}{C} = \frac{J}{s} \right] \quad (19)$$

Please click the advert

01001001 01010100  
 00100000 01010100  
 01110010 01100001  
 01101001 01101110  
 01100101 01100101

Sie sehen hier mehr als Nullen und Einsen?

Wir sehen Ihre Karriere im IT-Trainee-programm. Als spätere Fach- oder Führungskraft.

[www.perspektiven.allianz.de](http://www.perspektiven.allianz.de)

Allianz Karriere

Allianz 

As for the pump energy in equation ( 17) on page 43 the unit of the electrical energy in equation( 19) is given in “energy pr. time” (Joules pr. second). If one knows the resistance of one single cell pair  $R_{cell}$  the total resistance of the membrane stack consisting of  $n$  cell pairs can be calculated by multiplying the number of cell pairs with the resistance of one single cell pair (according to equation ( 9 ) on page 23). Thus equation ( 19) can be rewritten when the voltage drop over the whole membrane stack  $E$  is replaced by product of the total resistance of the membrane stack and the current flowing through the membrane stack according to Ohm’s law:

$$\dot{E}_{electrical} = I^2 \cdot R_{cell} \cdot n \quad (20)$$

The amount of salt that is removed from the diluate to the concentrate is directly proportional to the amount of current flowing through the membrane stack. The amount of current flowing through the membrane stack, the diluate volume flow rate  $Q_d$  and the current utilization  $\xi$  determines the difference between the inlet and outlet concentrations of the diluate  $\Delta c_d$  (the level of desalination). The current utilization is the product of the current efficiency  $\eta$  (from equation ( 16) on page 41) and the number of cell pairs  $n$  ( $\xi = \eta \times n$ ). This can be gathered in the following equation:

$$I = \frac{\Delta c_d \cdot Q_d \cdot z \cdot F}{\xi}, \quad SI - units : \quad I = \left[ \frac{mole}{m^3} \cdot \frac{m^3}{s} \cdot \frac{eq.}{mole} \cdot \frac{C}{eq.} = \frac{C}{s} \right] \quad (21)$$

Again the term  $z$  is the valence of the ions and  $F$  is the Faraday number. The expression for the current in equation ( 21) can be inserted into the equation ( 20) in order to get another expression for the electrical energy requirement to transfer ions through the ion exchange membranes:

$$\dot{E}_{electrical} = \frac{I \cdot R_{cell} \cdot n \cdot \Delta c_d \cdot Q_d \cdot z \cdot F}{\xi}, \quad (22)$$

$$SI - units : \quad \dot{E}_{electrical} = \left[ \frac{C}{s} \cdot \frac{J \cdot s}{C^2} \cdot \frac{mole}{m^3} \cdot \frac{m^3}{s} \cdot \frac{eq.}{mole} \cdot \frac{C}{eq.} = \frac{J}{s} \right]$$

It is often the cell resistance that is difficult to determine since it consists of different sub resistances (according to equation ( 9 ) on page 23) that can be very difficult to measure.

The different equations presented in this sub section can be used to calculate the energy requirement needed to remove a certain amount of ions from the diluate to concentration. Thus the electrical energy together with the energy required to pump the solutions through the system determines the overall energy consumption.



### 2.5.3 Thermodynamic least amount of energy

The energy consumption given in the previous section (2.5.2 *Electrical energy*) gives the actual energy consumption associated with ion transfer for a given electrodialysis system and this amount of energy is often much larger than the least amount of energy required just by looking at the thermodynamic least amount of energy required. The thermodynamic least amount of energy can be considered as the numerical value of the amount of energy that is released when a given amount of diluate and concentrate are mixed together. The thermodynamic least amount of energy required can be calculated by use of the following equation:

$$\dot{E}_{\text{thermodynamic least amount}} = 2 \cdot R_{\text{gas}} \cdot Q_d \cdot T \cdot (c_{d,\text{in}} - c_{d,\text{out}}) \cdot \left[ \frac{\ln\left(\frac{c_{d,\text{in}}}{c_{d,\text{out}}}\right)}{1 - \ln\left(\frac{c_{d,\text{in}}}{c_{d,\text{out}}}\right)} - \frac{\ln\left(\frac{c_{d,\text{in}}}{c_{c,\text{out}}}\right)}{1 - \ln\left(\frac{c_{d,\text{in}}}{c_{c,\text{out}}}\right)} \right] \quad (23)$$

$$SI - \text{units} : \quad \dot{E}_{\text{thermodynamic least amount}} = \left[ \frac{J}{\text{mole} \cdot K} \cdot \frac{\text{m}^3}{s} \cdot K \cdot \frac{\text{mole}}{\text{m}^3} = \frac{J}{s} \right]$$

Please click the advert

Turning a challenge into a learning curve.  
Just another day at the office for a high performer.

#### Accenture Boot Camp – your toughest test yet

Choose Accenture for a career where the variety of opportunities and challenges allows you to make a difference every day. A place where you can develop your potential and grow professionally, working alongside talented colleagues. The only place where you can learn from our unrivalled experience, while helping our global clients achieve high performance. If this is your idea of a typical working day, then Accenture is the place to be.

It all starts at Boot Camp. It's 48 hours that will stimulate your mind and enhance your career prospects. You'll spend time with other students, top Accenture Consultants and special guests. An inspirational two days

packed with intellectual challenges and activities designed to let you discover what it really means to be a high performer in business. We can't tell you everything about Boot Camp, but expect a fast-paced, exhilarating

and intense learning experience. It could be your toughest test yet, which is exactly what will make it your biggest opportunity.

Find out more and apply online.

Visit [accenture.com/bootcamp](http://accenture.com/bootcamp)

• Consulting • Technology • Outsourcing

  
High performance. Delivered.

In this equation it should be mentioned that “ $R_{gas}$ ” is the gas constant,  $Q_d$  is the total volume flow rate of the diluate and  $T$  is the absolute temperature. As mentioned above, this thermodynamic least amount of energy is often much less than the actual electrical energy requirement for transferring ion through the membranes (equation ( 19) on page 44 for example). This is due to the influence of different factors such as:

- The current efficiency  $\eta$  (equation ( 16) on page 41) is less than 1.
- The Ohmic resistance in the concentrate, diluate and electrode solutions and in the anion and cation exchange membranes causes generation of heat and thus “loss” of energy.

The thermodynamic efficiency can be evaluated by comparing the thermodynamic least amount of energy to remove ions from the diluate to the concentrate with the actual amount of energy used to remove ions from the diluate to the concentrate.

$$\text{Thermodynamic efficiency} = \frac{\dot{E}_{\text{thermodynamic least amount}}}{\dot{E}_{\text{electrical}}} = \left( \frac{\text{equation 23}}{\text{equation 19}} \right)$$

$$SI\text{-units} : \text{Thermodynamic efficiency} = \left[ \frac{\left( \frac{J}{s} \right)}{\left( \frac{J}{s} \right)} \right] = [-] \quad (24)$$

The thermodynamic efficiency is often very low (often below 5-10 %) which for an electrodialysis experiment will be sketched in the following example.

#### Example G: Thermodynamic efficiency

For an electrodialysis system consisting of 20 cell pairs the in- and outlet concentrations from the concentration and diluate chambers and the current were measured at each step of the voltage between 10 and 50 volts. The diluate flow rate was kept constant (6.6 g/s) and the feed solution consisted of sodium chloride. The temperature was also kept constant. At each voltage-step the electrical energy consumption was calculated by using equation ( 19):

$$\dot{E}_{\text{electrical}} = I \cdot E$$

The thermodynamic least amount of energy was also calculated at each voltage-step from the volume flow rate of the diluate and the different concentrations by use of equation ( 23):


$$\dot{E}_{\text{thermodynamic least amount}} = 2 \cdot R_{\text{gas}} \cdot Q_d \cdot T \cdot (c_{d,\text{in}} - c_{d,\text{out}}) \cdot \left[ \frac{\ln\left(\frac{c_{d,\text{in}}}{c_{d,\text{out}}}\right)}{1 - \ln\left(\frac{c_{d,\text{in}}}{c_{d,\text{out}}}\right)} - \frac{\ln\left(\frac{c_{d,\text{in}}}{c_{c,\text{out}}}\right)}{1 - \ln\left(\frac{c_{d,\text{in}}}{c_{c,\text{out}}}\right)} \right]$$

The thermodynamic efficiency is defined as the ratio between the thermodynamic least amount of energy and the actual electrical energy requirement according to equation (24) on page 47:

$$\text{Thermodynamic efficiency} = \frac{\dot{E}_{\text{thermodynamic least amount}}}{\dot{E}_{\text{electrical}}} = \left( \frac{\text{equation 23}}{\text{equation 19}} \right)$$

The thermodynamic efficiency is plotted as a function of the voltage for the experiment in Figure 12.

Thermodyn.  
efficiency [%]

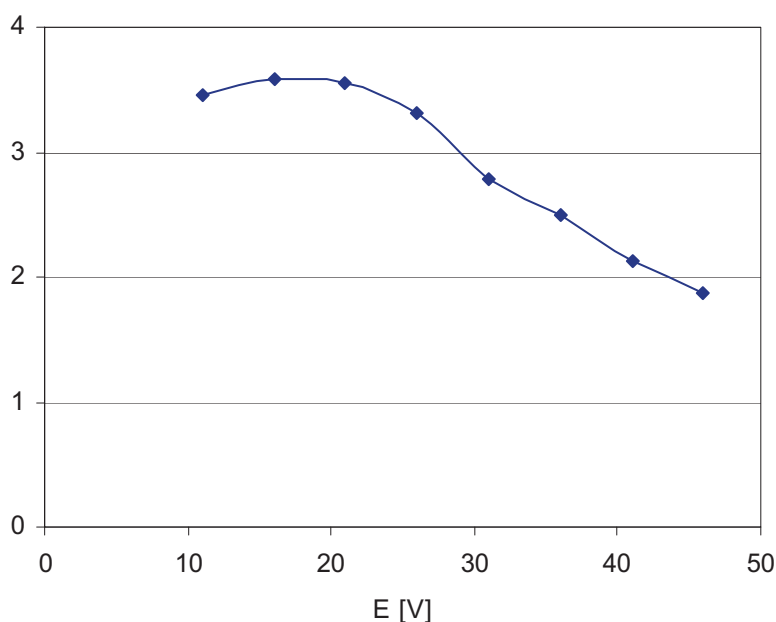

**Figure 12: Thermodynamic efficiency vs. voltage**

*The thermodynamic efficiency vs. the voltage for an electrodialysis experiments conducted at a constant diluate flow rate of 6.6 g/s and a sodium chloride feed solution of 0.16 mole/l.*

It is seen in Figure 12 that the thermodynamic efficiency throughout the whole experiment is very low and in all cases below 4 %. It is also seen that at low voltage the thermodynamic is higher than at large voltage. An explanation could be that at these conditions the irreversible processes at the electrodes do not play as large a role at when the voltage is increased. Therefore the efficiency at low voltage is “closer” the thermodynamic least amount of required energy than at larger voltage.

## 2.6 Anti-fouling mechanism

When electrodialysis is applied commercially to desalt seawater, fouling of the ion exchange membranes can be a severe problem as in every other membrane separation process. Particle material, colloids, macromolecules and other charged or uncharged components can block the membrane pores or membrane surface and thus increase the resistance of the membrane. This will increase the operation costs. In electrodialysis in which a current flows in one direction, especially larger charged components can be transferred to the membrane surface but because of their size they are not able to pass through the membrane. Scaling on the membrane surface at high concentrations can also create problems. Because most of the colloids and macromolecules that appear in the water are negatively charged, it is mostly the anion exchange membranes that are affected by the fouling problems. In some commercial electrodialysis system this is avoided by changing the direction of the current every 30 minutes for example. Of course this leads to changes of the chambers every 30 minutes:

- Diluate chambers → Concentrate chambers
- Concentrate chambers → Diluate chambers

Please click the advert



**Join the Vestas Graduate Programme**

Experience the Forces of Wind and kick-start your career

As one of the world leaders in wind power solutions with wind turbine installations in over 65 countries and more than 20,000 employees globally, Vestas looks to accelerate innovation through the development of our employees' skills and talents. Our goal is to reduce CO<sub>2</sub> emissions dramatically and ensure a sustainable world for future generations.

Read more about the Vestas Graduate Programme on [vestas.com/jobs](http://vestas.com/jobs).  
**Application period will open March 1 2012.**

**Wind.** It means the world to us.™

**Vestas**

Download free ebooks at [bookboon.com](http://bookboon.com)

This means that the outlet from the chambers in the first short period after changing the direction of the current can not be used as concentrate and diluate. But after this period the concentrate and diluate can again be collected from the outlet of the membrane stack. By doing this changing of current direction the charged larger particles and components that eventually will stick to the membrane surfaces will every 30 minutes be removed and moved to the other side the chamber and thus a build up of a large fouling layer over a longer period is avoided. Thus the overall resistance of the membrane stack will by average be kept constant and the running costs will be kept constant.

### 3. Summary

In this text we have learned about basic terms used in the world of electrically driven membrane processes. The core in electrically driven membrane processes are membranes incorporated with fixed charges:

- The anion exchange membranes and
- The cation exchange membranes.

We have been looking at the fluxes of ions through these membranes and we have seen that these fluxes depend on the transport numbers of the ions. The membranes achieve their selectivity because these transport numbers for the oppositely charged ions are very different inside the membrane whereas the transport numbers in the solution for the oppositely charged ions are almost equal for equal valences. It is also explained that the separation principle in electrical driven membrane processes is based on Donnan exclusion.

One major part of the electrical driven membrane processes is electrodialysis. Electrodialysis has many applications and one of the greatest is the desalination of saline water into potable water. The basic concepts of electrodialysis are explained as well as the existence of a critical current. Examples are included in order to show ways to determine this critical current experimentally and from literature correlations based on dimensionless numbers concerning flow and mass transfer. The influence of the hydrodynamic conditions on the critical current is also explained and discussed. Other relevant terms used in the evaluation of electrodialysis systems such as the desalination degree and the current efficiency are also described and discussed through relevant examples. The energy required to run electrodialysis systems can be divided into the energy required to pump the solutions through the system and the energy required to transfer ions through the ion exchange membranes. Relevant equations are given in order to calculate these energy requirements and the thermodynamic efficiency is also defined. Finally some fouling problems are briefly mentioned together with an approach for avoiding these fouling problems.

Other electrically driven membrane processes such as the REED process patented by the Danish company Jurag Separation A/S, Donnan dialysis, Membrane electrolysis, the use of bipolar membranes and finally fuel cells can also be mentioned. Some of these processes certainly have the potential to grow in the future.

Since electrically driven membrane processes and membrane processes and membrane technology in general have such a broad spectrum of applications and opportunities, knowledge and practical experience of this field is of very great importance. Every engineering student choosing this path will have the potential of a great and exciting career...



*... so keep on using your memBRAIN!  
... or something, huh, heh.*

*Søren Prip Beier*



## Notes

<sup>1</sup> For further explanation of different kinds of transport please see "Transport phenomena", S.P. Beier, Ventus Publishing (2006), ISBN: 87-7681-123-9.

<sup>2</sup> For explanations of concentration polarization phenomena in general please see "Pressure driven membrane processes", S.P. Beier, Ventus Publishing (2006), ISBN: 87-7681-152-2.

<sup>3</sup> It shall however be mentioned that the enhanced concentration in the boundary layer on the concentrate side can lead to scaling of ionic solids at the membrane surface on the concentrate side for example if the concentrate contains calcium ions

<sup>4</sup> This happens at the cation exchange membrane before it happens at the anion exchange membrane. This is due to fact that the electrical mobility of the cations is generally a bit lower than for the anions. In the case of sodium chloride the transport number of sodium ions is approximately 0.4 and the transport number for chloride ions is approximately 0.6 (and actually not equal which is stated in equation ( 7 ) on page 13). This is because the friction between the water molecules and the ions is largest for cations. This means that at a given current the concentration at the membrane surface on the diluate side ( $c'_d$ ) will reach zero at the cation exchange membrane before it reaches zero at the anion exchange membrane. Thus the limiting current will be attained faster at the cation exchange membrane than at the anion exchange membrane

<sup>5</sup> Other kinds of transport concerning the transport of water molecules through the ion exchange membranes are also observed in electrodialysis. Osmotic transport of water from the diluate to the concentrate can be observed because of the concentration difference. Electroosmotic water transport can also be observed as sketched in Figure 3 on page 10 where water molecules are dragged along with the electrically transported ions.

<sup>6</sup> When, however, the feed solution ion concentration is increased and reaches a level of concentration as the fixed charges in the ion exchange membrane, some co-ions may also enter the membrane which of course is unwanted since the membrane then loses its selectivity. That way the current efficiency becomes very low and the electrical energy consumption increases.

<sup>7</sup> From M. Mulder, "Basic principles of membrane technology", 2<sup>nd</sup> edition, Kluwer Academic Publishers, 1996